# CONTAX

# RTS II QUARTZ

## ASSEMBLING CHART

YASHICA CO., LTD.
TOKYO JAPAN

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

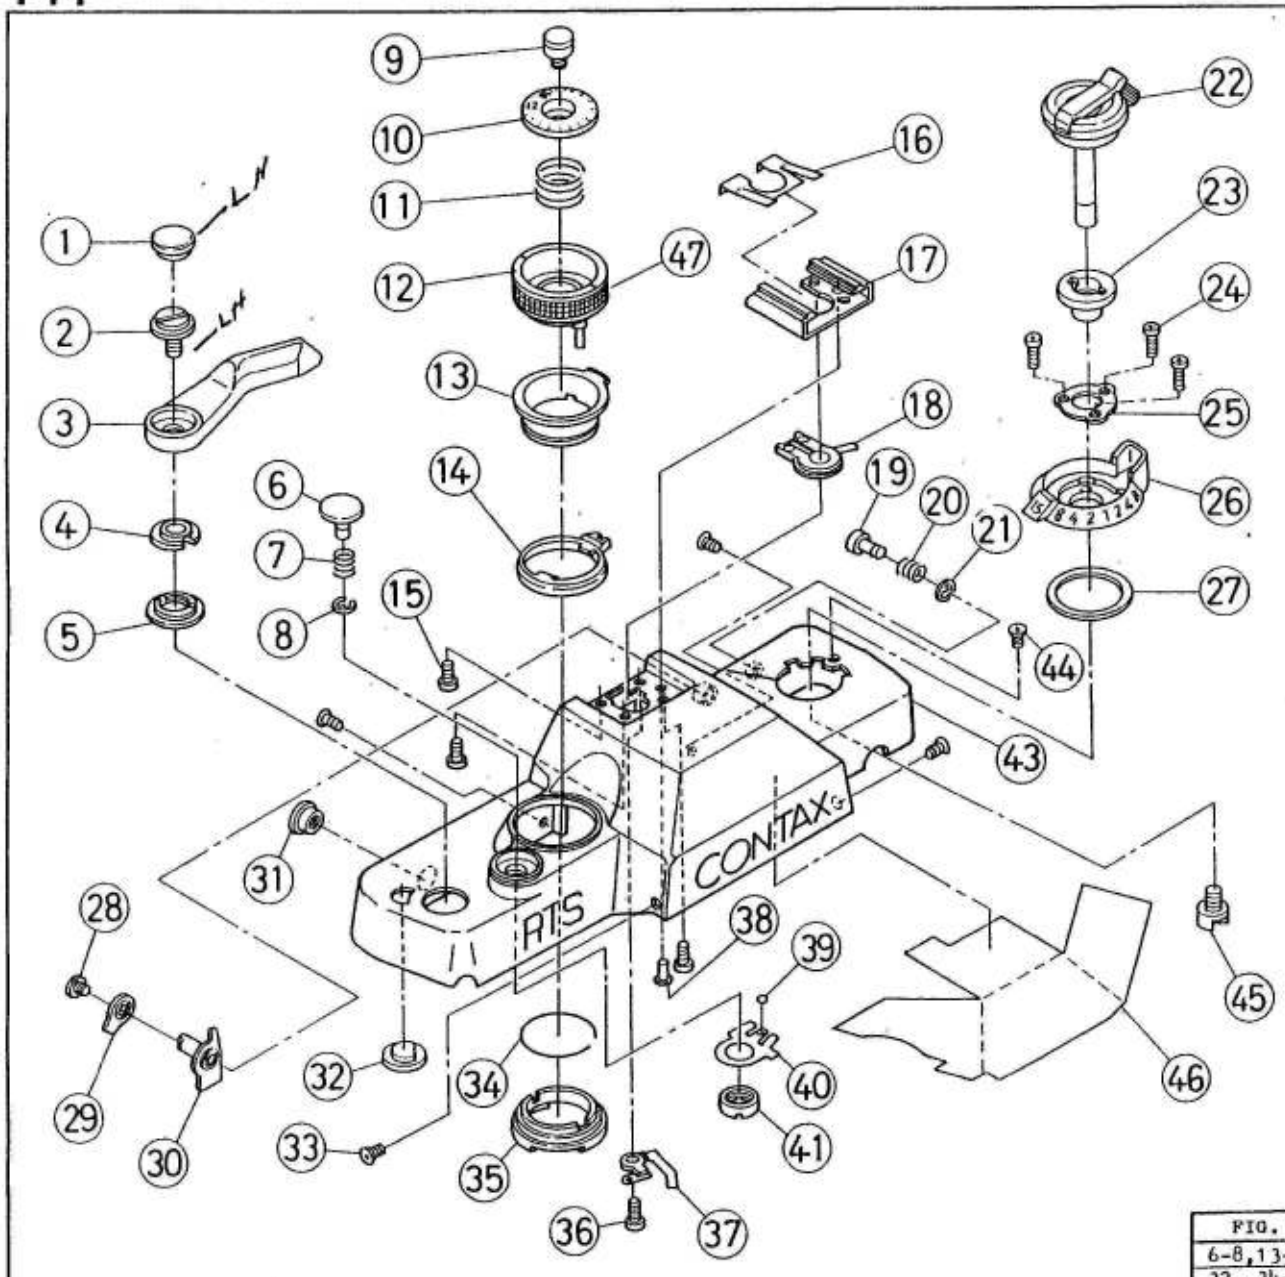


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 141 273 | Winding Lever Dress Screw | 1 |
| 2 | 141 272 | Winding Lever S.S. | 1 |
| 3 | 141 270 | Winding Lever | 1 |
| 4 | 141 271 | Winding Lever Base | 1 |
| 5 | 141 274 | Top Cover Nut | 1 |
| 6 | 141 182 | Release Button | 1 |
| 7 | 141 183 | Release Spring | 1 |
| 8 | 66102025 | E - Ring | 1 |
| 9 | 141 266 | ASA Name Plate Dress Screw | 1 |
| 10 | 141 263 | ASA Name Plate | 1 |
| 11 | 141 264 | ASA Dial Spring | 1 |
| 12 | 071 260 | ASA Dial Ass'y | 1 |
| 13 | 141 171 | Correction Indicator Needle | 1 |
| 14 | 141 170 | Main SW Lever | 1 |
| 15 | 63911822 | Accessory Shoe S.S. | 3 |
| 16 | 139 178 | Shoe Dress Plate | 1 |
| 17 | 141 161 | Accessory Shoe | 1 |
| 18 | 071 162 | Shoe Contact Ass'y | 1 |
| 19 | 141 167 | S. Lock Button | 1 |
| 20 | 139 192 | S. Lock Button Sp. | 1 |
| 21 | 66101225 | E. Ring | 1 |
| 22 | 071 251 | Rewind Knob Ass'y (See: Page#18) | 1 |
| 23 | 131 676 | Rewind Shaft Holder Nut | 1 |
| 24 | 61914026 | Shutter Dial S.S. | 3 |
| 25 | 131 200 | Shutter Dial Holder | 1 |
| 26 | 141 250 | Shutter Dial | 1 |
| 27 | 131 181 | Shutter Dial Moquette | 1 |
| 28 | 141 178 | ES. Driving Lever S.S. | 1 |
| 29 | 141 174 | ES. Driving Lever | 1 |
| 30 | 071 177 | ES. Driving Cam Ass'y | 1 |
| 31 | 139 164 | Release Socket Dress Ring | 1 |
| 32 | 131 162 | Counter Window | 1 |
| 33 | 131 391 | Top Cover S.S. | 1 |
| 34 | 141 172 | Correction Indicator N. Stopper | 1 |
| 35 | 141 169 | M. SW Click Ring | 1 |
| 36 | 63912526 | Shoe Contact Plate (1) S.S. | 1 |
| 37 | 139 174 | Shoe Contact Plate (1) Ass'y | 1 |
| 38 | 141 165 | Shoe Contact Plate Pin | 1 |
| 39 | 66701220 | Steel Ball | 1 |
| 40 | 141 184 | M. SW Click Plate | 1 |
| 41 | 141 185 | Click Plate Nut | 1 |
| 43 | ★ | Top Cover | 1 |
| 44 | 61811822 | Top Cover S.S. | 1 |
| 45 | 131 658 | Rewind Shaft | 1 |
| 46 | 141 173 | Top Cover Insulation Sheet | 1 |
| 47 | 141 261 | Dial Cover | 1 |

| FIG. NO. | PARTS NO. | DESCRIPTION |
|---|---|---|
| 6-8, 13-21, 28-30, 32, 34-43, 46. | 071 160 | Top Cover Ass'y |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

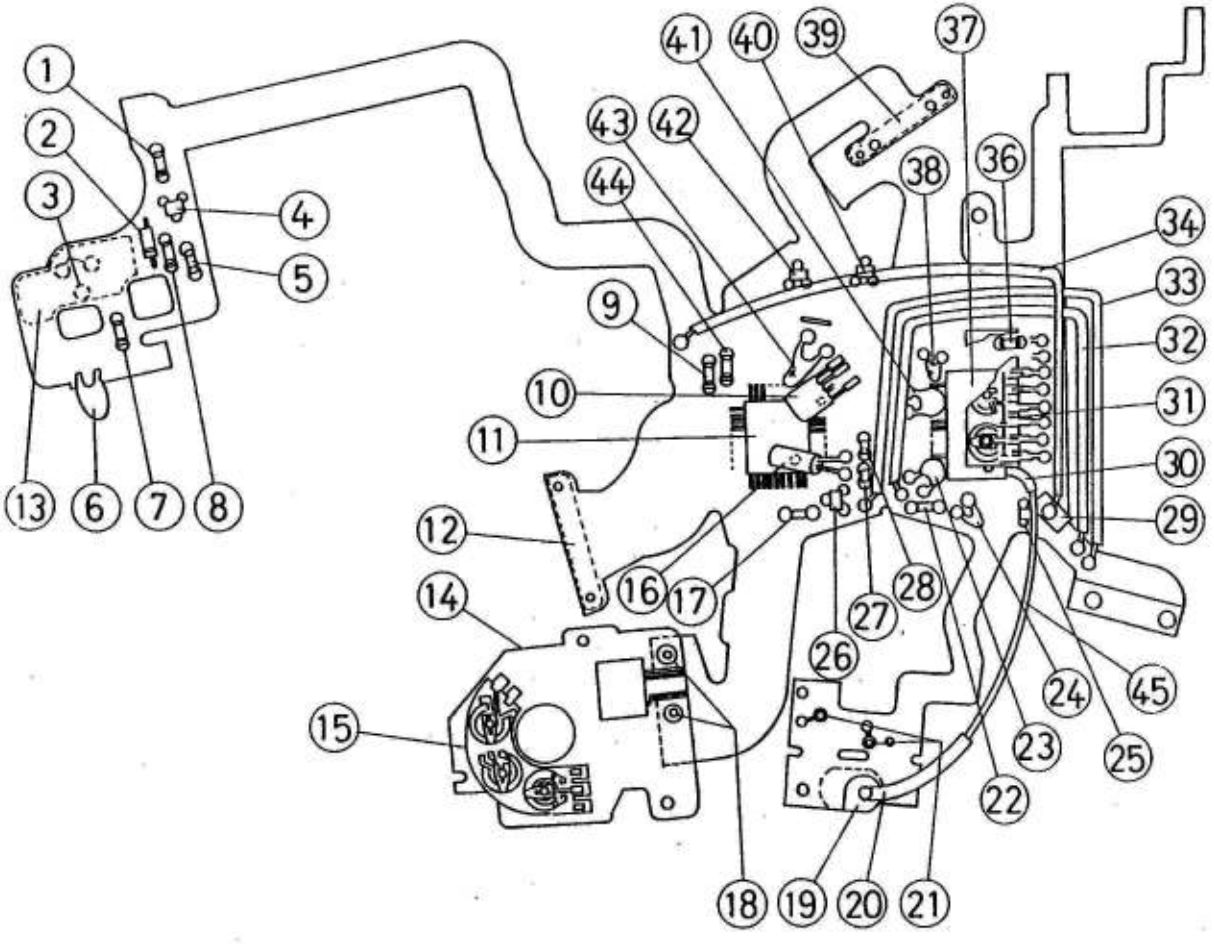

| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 141 528 | Resistor | 1 |
| 2 | 141 535 | Diode | 1 |
| 3 | 141 581 | Terminal Contact | 3 |
| 4 | 152 510 | Transistor | 1 |
| 5 | 152 534 | Resistor | 1 |
| 6 | 141 533 | Capacitor | 1 |
| 7 | 152 534 | Resistor | 1 |
| 8 | 141 525 | Resistor | 1 |
| 9 | 141 526 | Resistor | 1 |
| 10 | 141 503 | Safty Volt-age I C | 1 |
| 11 | ★ | Digital IC | 1 |
| 12 | 141 550 | Time LED Supporting Base | 1 |
| 13 | 141 554 | MD Supporting Base | 1 |
| 14 | 141 512 | Time Cord Base | 1 |
| 15 | 141 519 | Variable Resistor A | 1 |
| 16 | 137 506 | Crystal Plate | 1 |
| 17 | 152 534 | Resistor | 1 |
| 18 | 141 574 | TC Base Connector Pin | 1 |
| 19 | 141 521 | SPD - 1 | 1 |
| 20 | 141 529 | Insulation Tube (2) | 1 |
| 21 | 141 580 | Shoe Terminal Sp. | 1 |
| 22 | 152 535 | Resistor | 1 |
| 23 | 139 523 | Capacitor | 1 |
| 24 | 137 536 | Capacitor | 1 |
| 25 | 139 506 | Capacitor | 1 |
| 26 | 152 510 | Mini Transistor | 1 |
| 27 | 137 527 | Capacitor | 1 |
| 28 | 137 527 | Capacitor | 1 |
| 29 | —— | Insulation Tape | 1 |
| 30 | 141 524 | Insulation Tube (1) | 1 |
| 31 | 141 518 | Variable Resistor A | 1 |
| 32 | 67803090 | Cord (Orange) | 1 |
| 33 | 67804090 | Cord (Yellow) | 1 |
| 34 | 67807090 | Cord (Purple) | 1 |
| 36 | 137 525 | Capacitor | 1 |
| 37 | 141 501 | Analog IC | 1 |
| 38 | 345 515 | Capacitor | 1 |
| 39 | 141 553 | Information Supporting Base | 1 |
| 40 | 152 510 | Mini Transistor | 1 |
| 41 | 139 521 | Capacitor | 1 |
| 42 | 152 525 | Mini Transistor | 1 |
| 43 | 141 532 | Capacitor | 1 |
| 44 | 141 526 | Resistor | 1 |
| 45 | 67726030 | Cord (Blue) | 1 |

| FIG. NO. | PARTS NO. | DESCRIPTION |
|---|---|---|
| 1 - 45 | 071 505 | Amplifier Ass'y (See! Page No. 6,10) |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

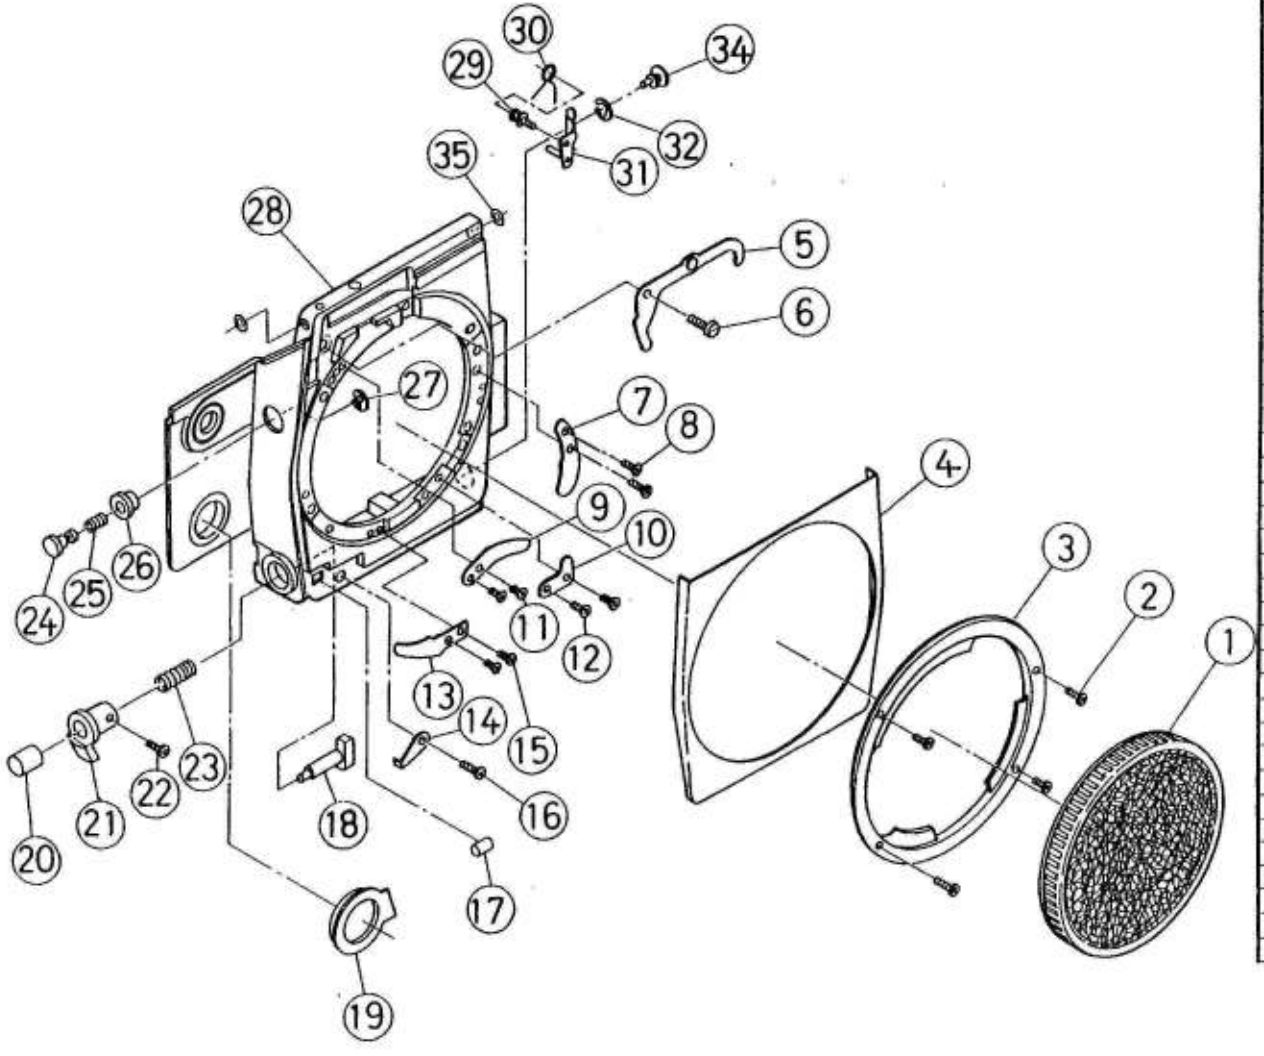


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 128 118 | Body Cap | 1 |
| 2 | 131 177 | Body Mount S.S. | 4 |
| 3 | 142 810 | Body Mount | 1 |
| 4 | 141 899 | Front Cover | 1 |
| 5 | 141 854 | Lock Lever | 1 |
| 6 | 141 856 | Lock Lever Shaft | 1 |
| 7 | 139 812 | Mount Spring | 1 |
| 8 | 61913026 | Mount Spring S.S. | 2 |
| 9 | 139 812 | Mount Spring | 1 |
| 10 | 139 813 | Mount Stopper | 1 |
| 11 | 61913026 | Mount Spring S.S. | 2 |
| 12 | 61913026 | Mount Stopper S.S. | 2 |
| 13 | 139 812 | Mount Spring | 1 |
| 14 | 141 876 | Mechan. Change Click Spring SS | 1 |
| 15 | 61913026 | Mount Spring S.S. | 2 |
| 16 | 63913022 | Mechan. Change Click Spring SS | 1 |
| 17 | 141 877 | Mechan. Change Click Roller | 1 |
| 18 | 141 873 | Diaphragm Button Shaft | 1 |
| 19 | 141 829 | Self Indicator | 1 |
| 20 | 141 871 | Diaphragm Button | 1 |
| 21 | 141 872 | Mechan. Change Lever | 1 |
| 22 | 141 874 | Mechan. Change Lever Stopper | 1 |
| 23 | 141 875 | Diaphragm Button Spring | 1 |
| 24 | 141 859 | Lens Lock Button | 1 |
| 25 | 141 861 | Lens Lock Button Spring | 1 |
| 26 | 141 860 | Lens Lock Button Holder | 1 |
| 27 | 66101225 | E - 12 | 1 |
| 28 | ★ | Mount Base | 1 |
| 29 | 141 866 | B. Lever (1) Shaft | 1 |
| 30 | 141 867 | B. Lever Spring | 1 |
| 31 | 071 801 | B. Lever Ass'y | 1 |
| 32 | 141 868 | E - Ring | 1 |
| 34 | 141 864 | B. Socket | 1 |
| 35 | 60121810 | Mount Base Washer | 2 |

| FIG. NO. | PARTS NO. | DESCRIPTION |
|---|---|---|
| 2 - 35 | 071 801 | Mount Base Ass'y (See Page No. 4, 5) |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

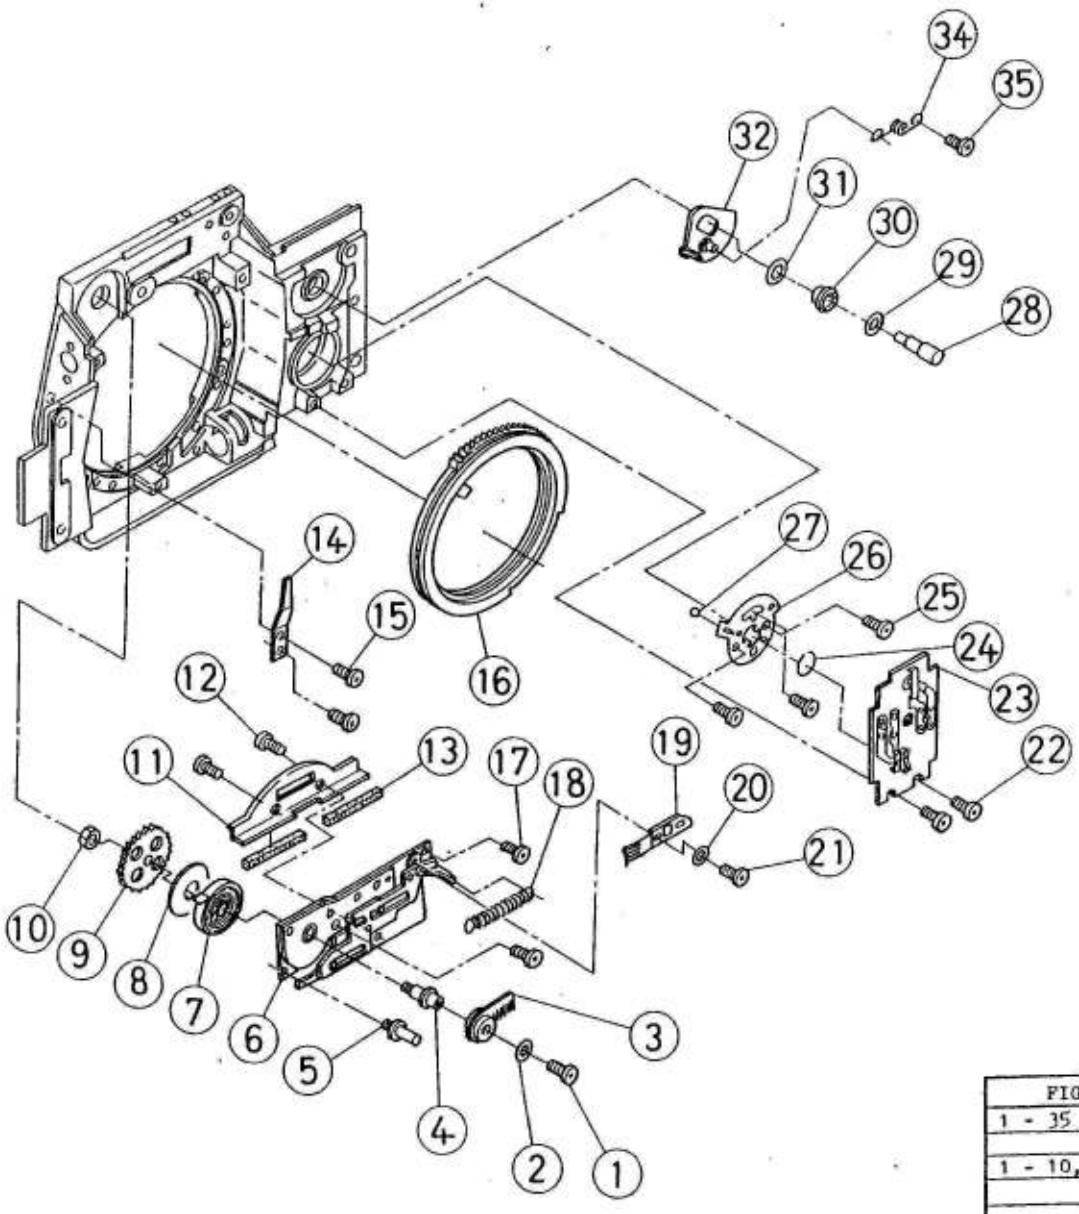


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 66001050 | Aperture Switch SS | 1 |
| 2 | 60321510 | Aperture Switch Washer | 1 |
| 3 | 071 819 | Aperture Switch Ass'y | 1 |
| 4 | 141 814 | F.Stop Resistor Gear Ass'y | 1 |
| 5 | 141 822 | FPC Fixer S.S. | 1 |
| 6 | ★ | Aperture Cord Base Ass'y | 1 |
| 7 | 141 812 | Winding Spring | 1 |
| 8 | 60414610 | Winding Spring Washer | 1 |
| 9 | 141 813 | F. Stop Resistor Gear | 1 |
| 10 | 66511722 | Six Angle Nut M 1.7 | 1 |
| 11 | 141 788 | Mirror Box Dress Plate(Upper) | 1 |
| 12 | 61801829 | Mirror Box Dress Plate S.S. | 2 |
| 13 | 141 789 | Mirror Cushion | 2 |
| 14 | 141 883 | Mirror Up Spring | 1 |
| 15 | 63902526 | Mirror Up Spring S.S. | 2 |
| 16 | 141 815 | F. Stop Ring | 1 |
| 17 | 63913022 | Information Cord Plate S.S. | 1 |
| 18 | 141 811 | Release Signal Spring | 1 |
| 19 | 141 810 | Release Signal Switch | 1 |
| 20 | 60321510 | Release Signal Switch Washer | 1 |
| 21 | 66001050 | Release Signal Switch S.S. | 1 |
| 22 | 63912522 | Checker Base S.S. | 2 |
| 23 | 071 513 | Checker Switch Base Ass'y | 1 |
| 24 | 141 833 | Self Timer Button Stopper | 1 |
| 25 | 61902526 | Self Timer Click Plate S.S. | 2 |
| 26 | 141 832 | Self Timer Click Plate | 1 |
| 27 | 66701620 | Steel Ball Ø 1.6 | 1 |
| 28 | 141 845 | EC Button Shaft | 1 |
| 29 | 60112110 | EC Button Shaft Washer | 1 |
| 30 | 139 217 | EC Button Holder | 1 |
| 31 | 141 838 | EC Button Holder Washer | 1 |
| 32 | 071 843 | EL Click Plate Ass'y | 1 |
| 34 | 141 852 | EL Click Spring | 1 |
| 35 | 141 853 | EL Click Spring Shaft | 1 |

| FIG. NO. | PARTS NO. | DESCRIPTION |
|---|---|---|
| 1 - 35 | 071 801 | Mount Base Ass'y |
| | | (See Page No. 3, 5) |
| 1 - 10, 17 - 21 | 071 803 | Aperture Cord Base Plate Assy |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

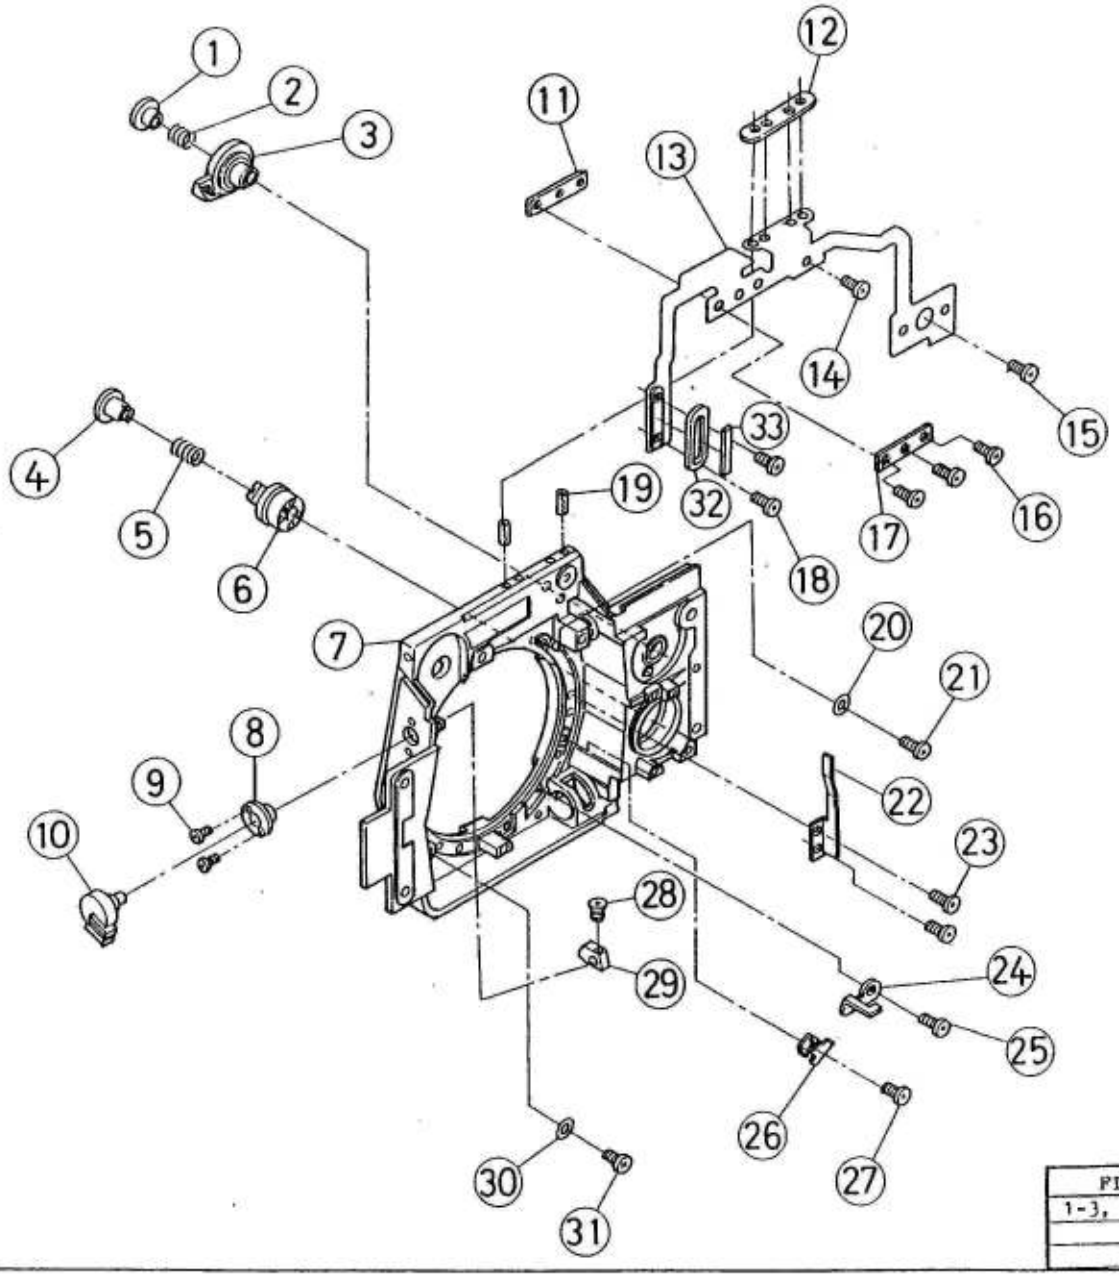


| | PARTS NO. | DESCRIPTION | Q'T |
|---|---|---|---|
| 1 | 141 844 | EC Button | 1 |
| 2 | 141 846 | EC Button Spring | 1 |
| 3 | 071 839 | EL Lever Ass'y | 1 |
| 4 | 141 827 | Self-timer Button | 1 |
| 5 | 141 831 | Self-timer Button Spring | 1 |
| 6 | 141 828 | Self-timer Lever | 1 |
| 7 | ★ | Mount Base | 1 |
| 8 | 141 881 | Mirror-up Knob Holder | 1 |
| 9 | 61902226 | Mirror-up Knob Holder SS | 2 |
| 10 | 141 880 | Mirror-up Knob | 1 |
| 11 | 141 543 | Information Cord Connector | 1 |
| 12 | 141 544 | Cord FPC Connector | 1 |
| 13 | 141 507 | Cord FPC | 1 |
| 14 | 66001050 | Release Signal Switch S.S. | 1 |
| 15 | 63912522 | Checker Plate S.S. | 1 |
| 16 | 66001050 | Cord FPC Fixer S.S. | 3 |
| 17 | 141 570 | Cord FPC Fixer | 1 |
| 18 | 63913022 | Information Cord Base S.S. | 2 |
| 19 | 66662230 | Spring Pin | 2 |
| 20 | 60451812 | Aperture Ring Washer | 1 |
| 21 | 63912522 | Aperture Ring S.S. | 1 |
| 22 | 141 861 | Lens Lock Spring | 1 |
| 23 | 63902526 | Lens Lock Spring SS | 2 |
| 24 | 141 878 | Mechan. Lever Stopper | 1 |
| 25 | 63913022 | Mechan. Lever Stopper S.S. | 1 |
| 26 | 141 817 | Aperture Ring Stopper | 1 |
| 27 | 63912522 | Aperture Ring S.S. | 1 |
| 28 | 61903026 | Mirror-up Cam S.S. | 1 |
| 29 | 141 882 | Mirror-up Cam | 1 |
| 30 | 60451812 | Aperture Ring Washer | 1 |
| 31 | 63912522 | Aperture Ring S.S. | 1 |
| 32 | 141 575 | T.C. Connector Guide | 1 |
| 33 | 141 542 | T.C. Connector | 1 |

| FIG.NO. | PARTS NO. | DESCRIPTION |
|---|---|---|
| 1-3, 7-10, 20-31 | 071 801 | Mount Base Ass'y |
| | | (See Page No. 3, 4) |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

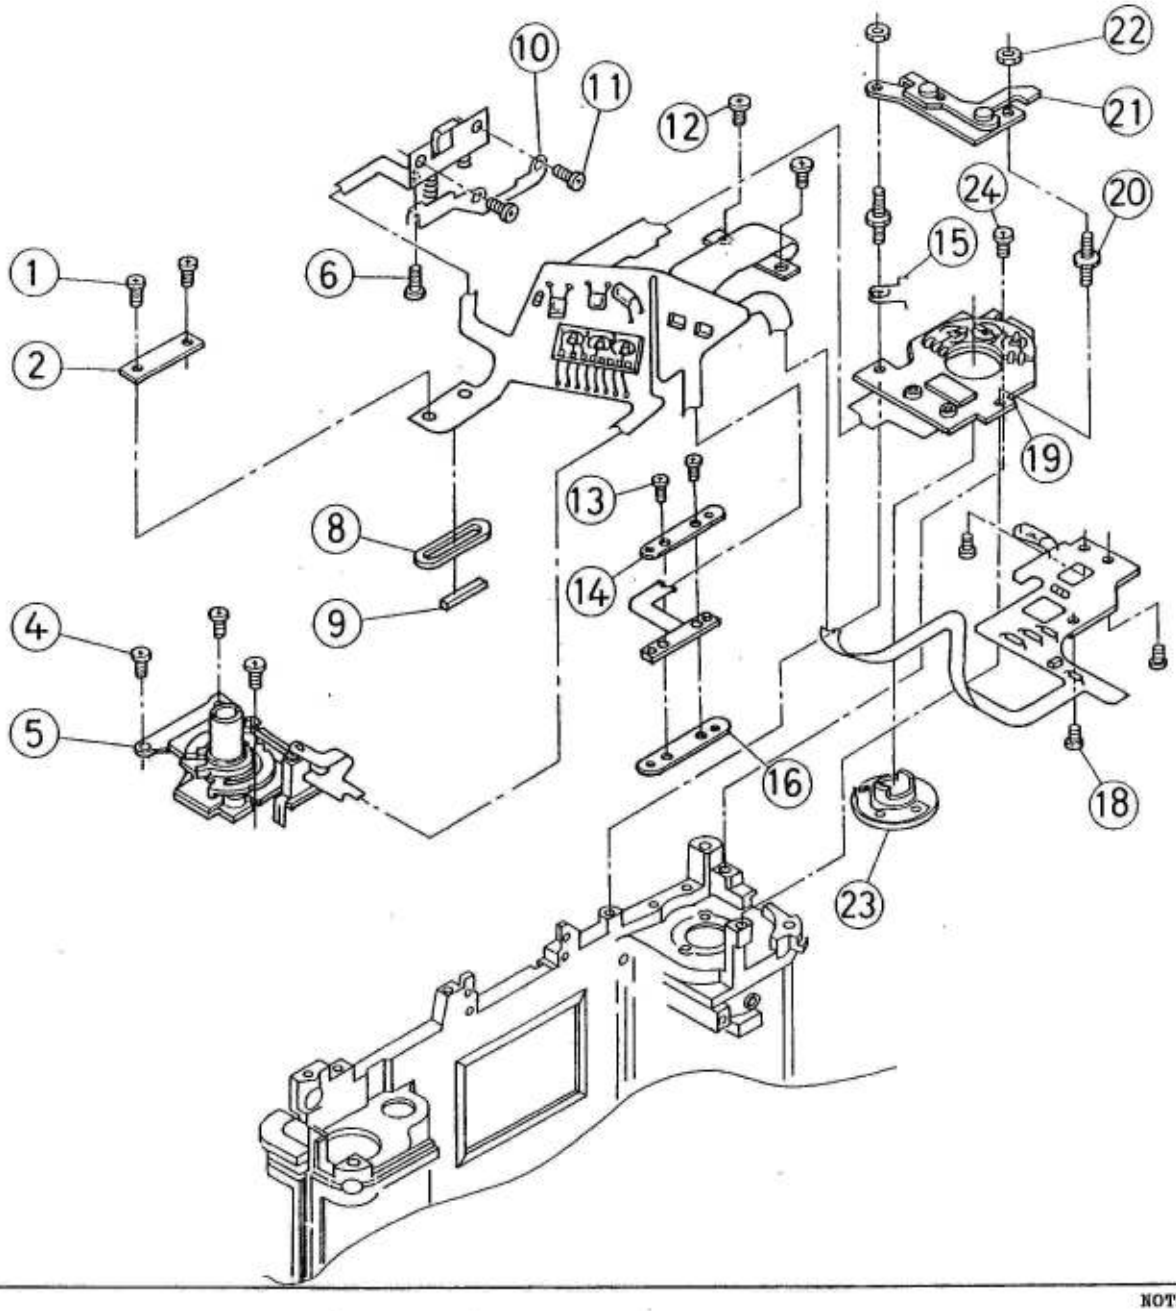


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 63902526 | Release Connector Fixer S.S. | 2 |
| 2 | 141 583 | Release Connector Fixer | 1 |
| 4 | 131 905 | Winding Base Plate (Upper) SS | 2 |
| 5 | | ASA Resistor Ass'y | |
| - | ★ | (See! Page No. 18) | 1 |
| 6 | 63902526 | Main P.P.C. S.S. | 1 |
| 8 | 141 576 | Release Connector Guide | 1 |
| 9 | 141 541 | Release Connector | 1 |
| 10 | 141 579 | SPD Cord Fixer | 1 |
| 11 | 63912022 | SPD S.S. | 2 |
| 12 | 63902526 | LED Connector S.S. | 2 |
| 13 | 63902526 | Information Connector Fixer SS | 2 |
| 14 | 141 584 | Information Connector Fixer | 1 |
| 15 | 141 243 | Release Plate Spring | 1 |
| 16 | 141 544 | Cord FPC Connector | 1 |
| 18 | 63912022 | Main P.P.C. S.S. | 3 |
| 19 | ——— | Amplifier Assy(See! Page#2,10) | 1 |
| 20 | 141 239 | Release Plate Holder Shaft | 2 |
| 21 | 071 240 | S. Lock Release Plate Ass'y | 1 |
| 22 | 66511722 | S. Lock Release Nut | 2 |
| 23 | 071 230 | S. Contact Base Plate Ass'y | 1 |
| 24 | 63913022 | Time Cord Base S.S. | 1 |

NOTE : (Parts with marked " ★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

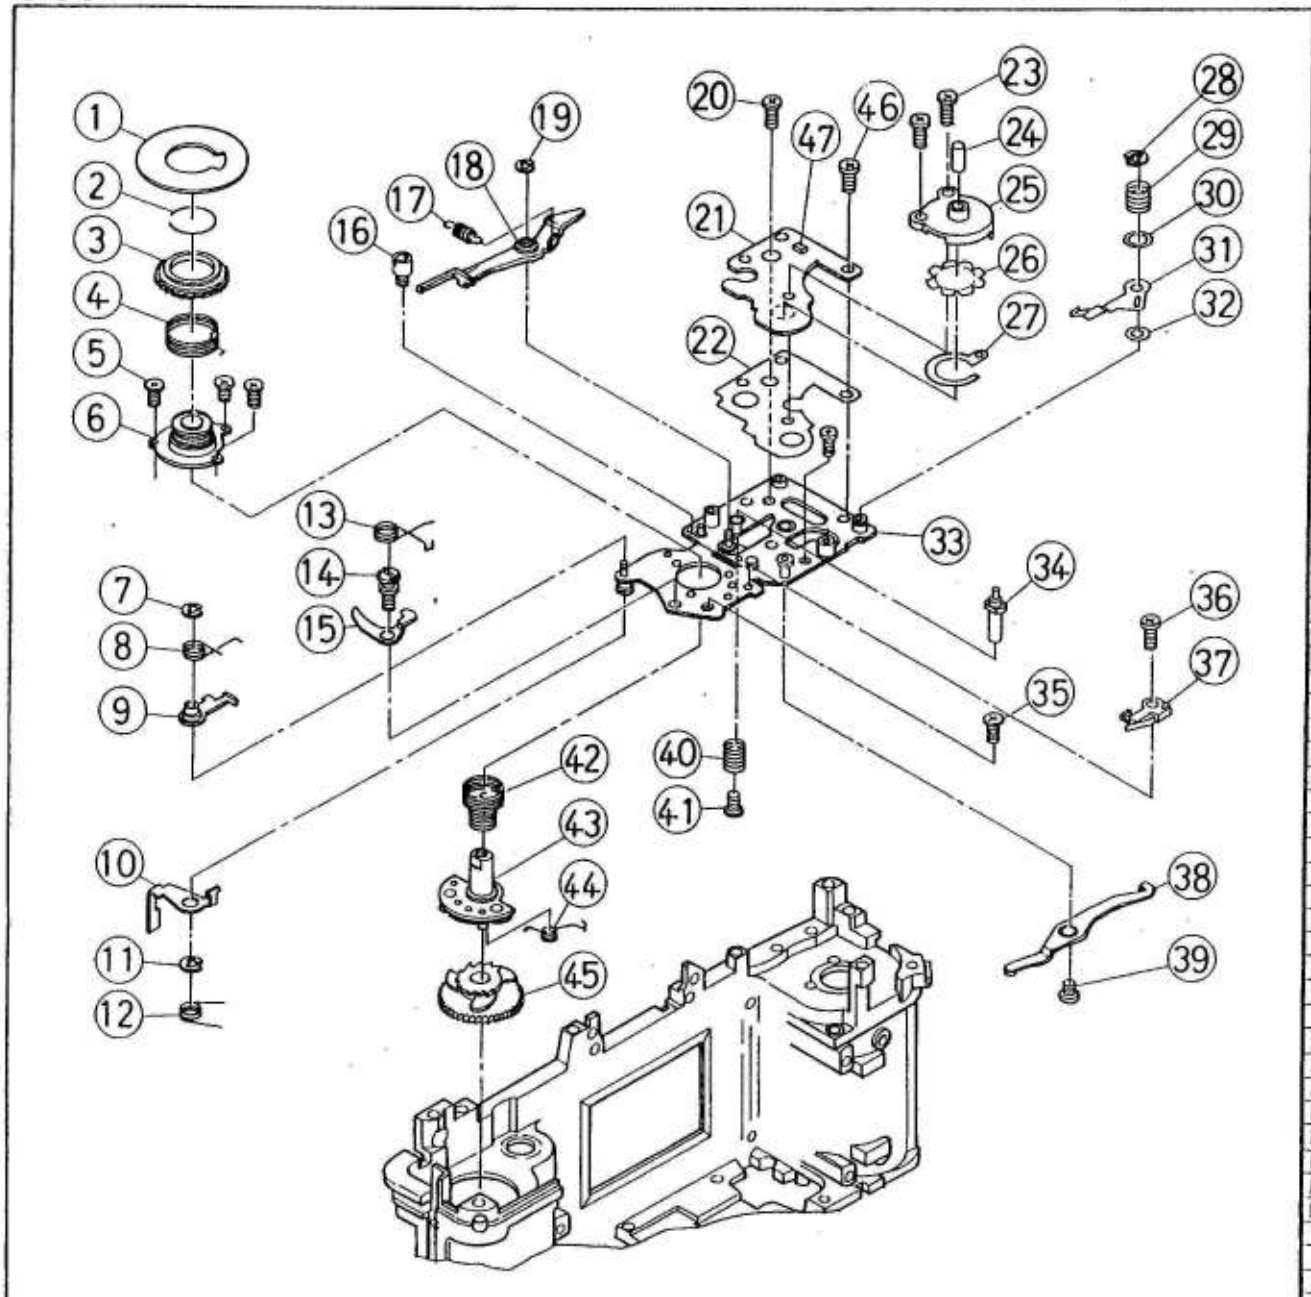

| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 141 640 | Counter Name Plate | 1 |
| 2 | 131 895 | Counter Gear Fixer | 1 |
| 3 | 141 638 | C. Ratchet | 1 |
| 4 | 141 639 | C. Sp. | 1 |
| 5 | 61811822 | Winding Shaft Holder S.S. | 3 |
| 6 | 141 602 | Winding Shaft Holder | 1 |
| 7 | 66101225 | E-12 | 1 |
| 8 | 141 632 | C. Stop Claw Spring | 1 |
| 9 | 071 630 | C. Stop Claw Ass'y | 1 |
| 10 | 141 634 | C. Release Lever | 1 |
| 11 | 66102025 | E-20 | 1 |
| 12 | 141 636 | C. Release Lever Spring | 1 |
| 13 | 141 644 | C. SW Sliding Lever Sp. | 1 |
| 14 | 141 643 | C. SW Sliding Lever Shaft | 1 |
| 15 | 141 642 | C. SW Sliding Lever | 1 |
| 16 | 141 648 | C. Indicater Shaft | 1 |
| 17 | 224 312 | C. Claw Spring | 1 |
| 18 | 071 625 | C. Feeding Claw Ass'y | 1 |
| 19 | 66101225 | E-12 | 1 |
| 20 | 63912522 | Winding Base Plate Ass'y S.S. | 1 |
| 21 | 141 514 | Release Base | 1 |
| 22 | 141 660 | Release Base Sit | 1 |
| 23 | 63904026 | Release SW Case S.S. | 2 |
| 24 | 141 275 | Release Shaft | 1 |
| - | 141 276 | Release Shaft(L) } Select | 1 |
| - | 141 277 | Release Shaft(S) } | 1 |
| 25 | 141 658 | Release SW Case | 1 |
| 26 | 141 661 | P.S. SW | 1 |
| 27 | 141 659 | Release Washer | 1 |
| 28 | 66101525 | E-15 | 1 |
| 29 | 141 655 | T-SW-Spring | 1 |
| 30 | 60322110 | T-SW-Washer | 1 |
| 31 | 141 060 | T-SW | 1 |
| 32 | 131 396 | First Curtain Sp. Drum W. | 1 |
| 33 | 071 601 | Winding Base Plate Ass'y | 1 |
| 34 | 141 620 | C. Feeding Claw Release Shaft | 1 |
| 35 | 61812522 | Shutter Ass'y S.S. | 1 |
| 36 | 63903026 | C-SW S.S. | 1 |
| 37 | 141 641 | C-SW | 1 |
| 38 | 071 612 | Charge Lever (1) Ass'y | 1 |
| 39 | 66001031 | Charge Lever (1) Ass'y S.S. | 1 |
| 40 | 141 621 | C. Feeding Claw Release Sp. | 1 |
| 41 | 66001042 | C. Feeding Claw Release Shaft SS | 1 |
| 42 | 131 617 | Winding Shaft Sp. | 1 |
| 43 | 071 605 | Winding Ass'y | 1 |
| 44 | 141 608 | Ratchet Spring | 1 |
| 45 | 141 030 | A. Gear Ass'y | 1 |
| 46 | 63902022 | Release Base Plate S.S. | 1 |
| 47 | 137 526 | Capacitor | 1 |

NOTE : (Parts with marked " ★ " are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

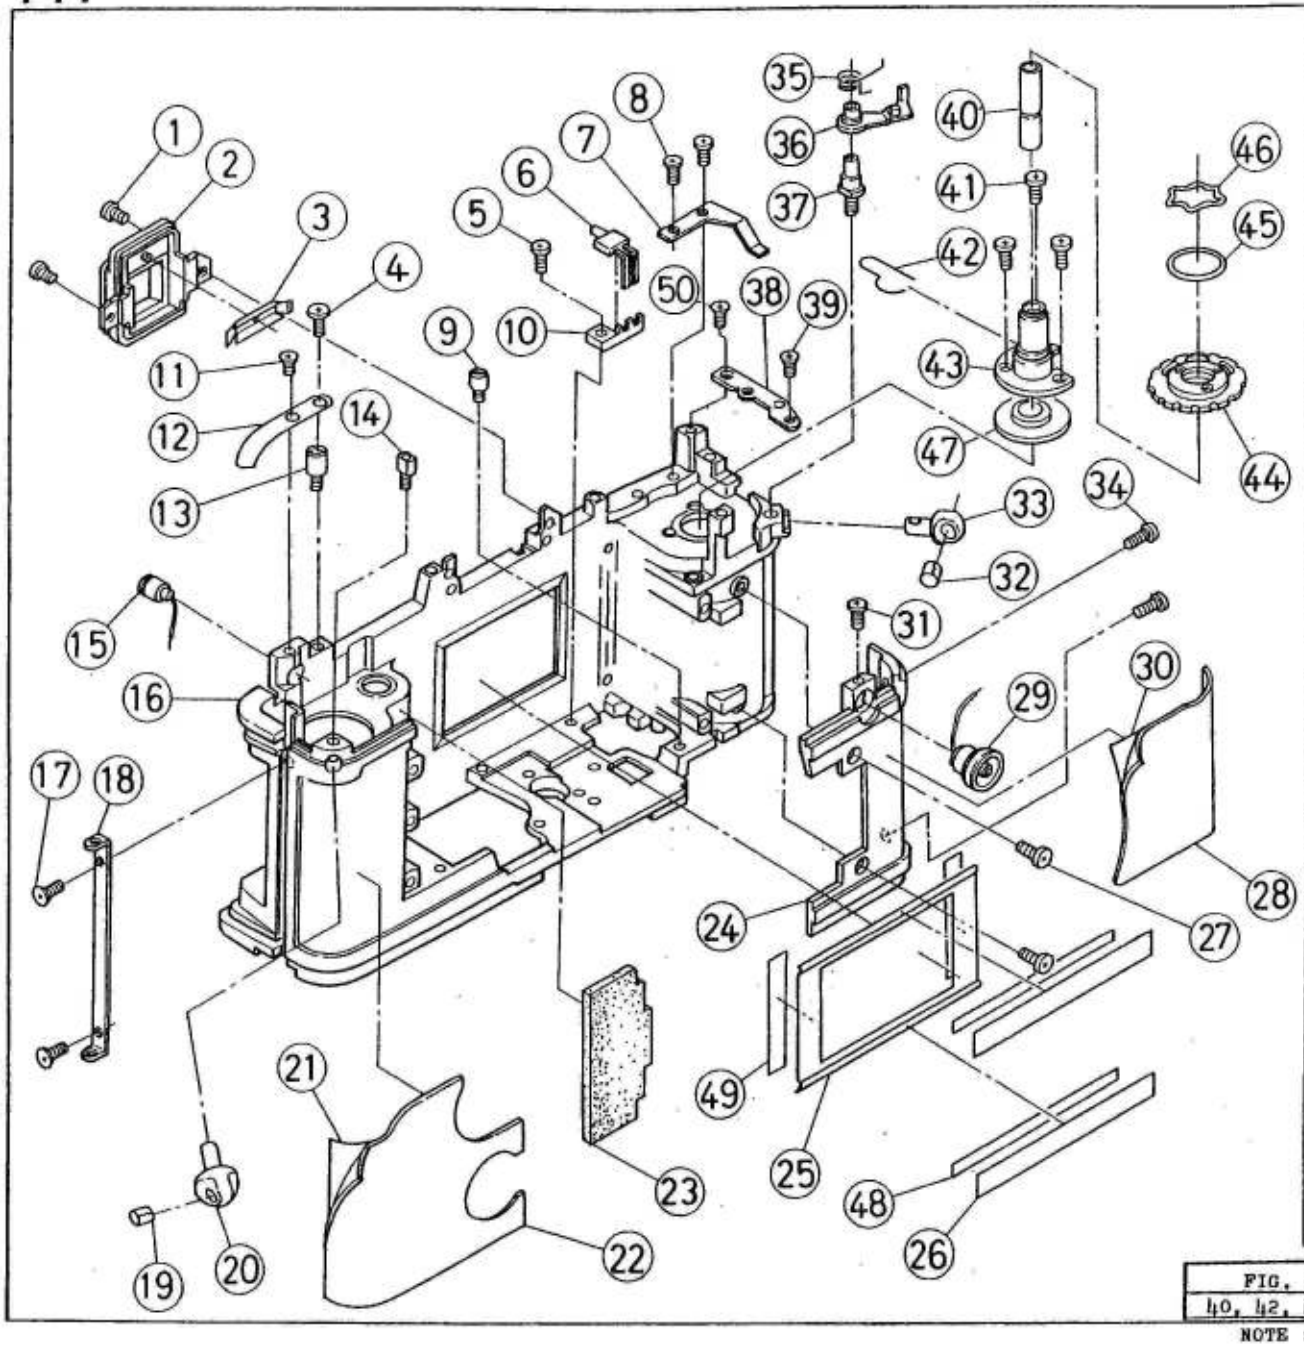


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 61914026 | Eye-piece Frame S.S. | 2 |
| 2 | 141 145 | Eye-piece Frame | 1 |
| 3 | 141 578 | SPD Shield Plate | 1 |
| 4 | 63912522 | Counter Indicater S.S. | 1 |
| 5 | 63913526 | D-LED Holder S.S. | 1 |
| 6 | 141 523 | Data Back LED | 1 |
| 7 | 141 114 | Lock Plate Spring | 1 |
| 8 | 63912526 | Lock Plate Spring S.S. | 2 |
| 9 | 141 120 | Lower Base Plate Fixer | 1 |
| 10 | 141 121 | D-LED Holder | 1 |
| 11 | 141 139 | R. Socket S.S. | 1 |
| 12 | 141 649 | Counter Indicator | 1 |
| 13 | 141 648 | Counter Indicator Shaft | 1 |
| 14 | 141 125 | Strap Holder S.S.(Left) | 1 |
| 15 | 065 462 | R. Socket Ass'y | 1 |
| 16 | ★ | Body | 1 |
| 17 | 61812522 | Hinge Shaft Holder S.S. | 2 |
| 18 | 141 116 | Hinge Shaft Holder | 1 |
| 19 | 131 122 | Reinforcement Ring | 1 |
| 20 | 141 126 | Strap Holder (2) | 1 |
| 21 | 141 103 | Leather Supporting Plate(Left) | 1 |
| 22 | 141 105 | Front Leather (Left) | 1 |
| 23 | 141 189 | Self Light-proof Moquette | 1 |
| 24 | 141 140 | Body Cover | 1 |
| 25 | 141 106 | Body Light-proof Plate | 1 |
| 26 | 131 696 | Mirror Box Light-proof Plate(2 | 2 |
| 27 | 63912527 | Body Cover S.S. | 2 |
| 28 | 141 104 | Front Leather (Right) | 1 |
| 29 | 065 128 | Synchro Socket Ass'y | 1 |
| 30 | 141 102 | Leather Supporting Plate(Right | 1 |
| 31 | 63912522 | Synchro Socket S.S. | 1 |
| 32 | 131 122 | Reinforcement Ring | 1 |
| 33 | 131 109 | Strap Holder (1) | 1 |
| 34 | 63913526 | Body Cover S.S. | 2 |
| 35 | 141 236 | S. Click Spring | 1 |
| 36 | 071 235 | S. Click Lever Ass'y | 1 |
| 37 | 141 124 | Strap Holder S.S.(Right) | 1 |
| 38 | 141 237 | Top Cover Stopper | 1 |
| 39 | 61813022 | Top Cover Stopper S.S. | 1 |
| 40 | 141 112 | Rewind Shaft Guide | 1 |
| 41 | 63923026 | Rewind Shaft Holder S.S. | 3 |
| 42 | 141 117 | Rewind Shaft Spring | 1 |
| 43 | 141 110 | Rewind Shaft Holder | 1 |
| 44 | 071 233 | S. Click Plate Ass'y | 1 |
| 45 | 131 687 | Rewind Knob Adjusting Washer | 1 |
| 46 | 131 677 | Rewind Knob Washer | 1 |
| 47 | 141 111 | Light-proof Ring | 1 |
| 48 | 131 698 | Tape (2) | 2 |
| 49 | 141 118 | Body Light-proof Plate Tape | 2 |
| 50 | 61801826 | Top Cover Stopper S.S. | 1 |

| FIG. NO. | PARTS NO. | DESCRIPTION |
|---|---|---|
| 40, 42, 43 | 071 110 | Rewind Shaft Holder Ass'y |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

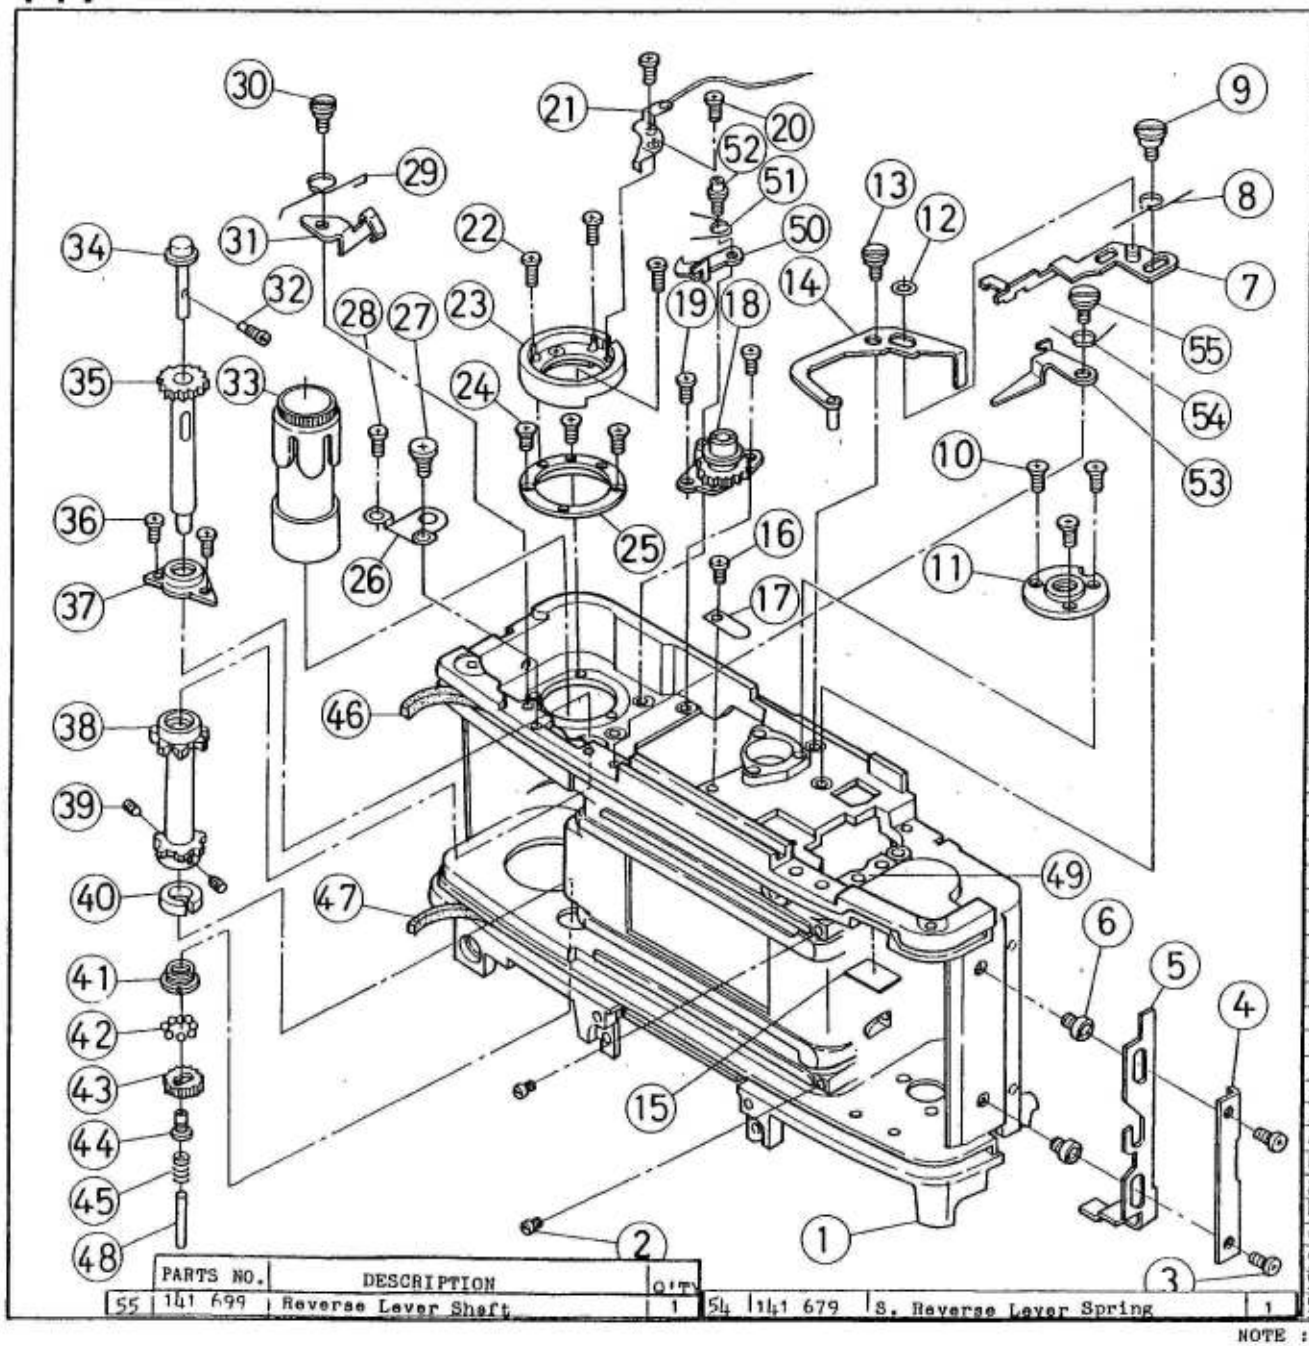

| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | ★ | Body | 1 |
| 2 | 131 113 | Film Guide Pin | 2 |
| 3 | 61812526 | Back Cover Lock Plate Cover SS | 2 |
| 4 | 141 115 | Back Cover Lock Plate Cover | 1 |
| 5 | 141 113 | Back Cover Lock Plate | 1 |
| 6 | 131 118 | Back Cover Lock Plate Shaft | 2 |
| 7 | 071 130 | Mechan. Lever (1) Ass'y | 1 |
| 8 | 141 135 | Mechan. Lever Spring | 1 |
| 9 | 141 134 | Mechan. Lever Spring Shaft | 1 |
| 10 | 61824522 | Tripod Socket Base S.S. | 3 |
| 11 | 141 138 | Tripod Socket Base | 1 |
| 12 | 60222610 | Mechan. Lever Shaft Washer | 1 |
| 13 | 141 133 | Mechan. Lever Shaft | 1 |
| 14 | 071 131 | Mechan. Lever (2) Ass'y | 1 |
| 15 | 131 115 | Patrone Holder | 1 |
| 16 | 63912522 | Cord Fixer S.S. | 1 |
| 17 | 110 928 | Cord Fixer | 1 |
| 18 | 071 694 | MD. Gear Ass'y | 1 |
| 19 | 61912026 | MD. Gear Base S.S. | 2 |
| 20 | 61912022 | B. Contact Base S.S. | 2 |
| 21 | 071 684 | B. Contact Base Ass'y | 1 |
| 22 | 61914529 | Battery Base S.S. | 3 |
| 23 | 131 150 | Battery Base | 1 |
| 24 | 61912826 | Spool Holder S.S. | 3 |
| 25 | 131 642 | Spool Holder | 1 |
| 26 | 141 680 | Sprocket Light-proof Plate | 1 |
| 27 | 147 437 | SR. Lever (3) Shaft | 1 |
| 28 | 61912026 | Sprocket Light-proof Plate SS | 1 |
| 29 | 141 686 | RS Sliding Lever Spring | 1 |
| 30 | 141 662 | RS Sliding Lever Shaft | 1 |
| 31 | 141 685 | RS Sliding Lever | 1 |
| 32 | 141 664 | Release Pin | 1 |
| 33 | 071 682 | Spool Ass'y | 1 |
| 34 | 071 674 | S. Release Shaft Ass'y | 1 |
| 35 | 071 663 | Sprocket Shaft Ass'y | 1 |
| 36 | 61912026 | Sprocket Shaft Holder S.S. | 2 |
| 37 | 071 667 | Sprocket Shaft Holder Ass'y | 1 |
| 38 | 141 670 | Sprocket | 1 |
| 39 | 62511824 | Sprocket S.S. | 2 |
| 40 | 141 671 | Clutch Shaft | 1 |
| 41 | 141 665 | Sprocket Shaft Holder Upper | 1 |
| 42 | 66701220 | Steel Ball Ø 1.2 | 14 |
| 43 | 141 666 | D Gear | 1 |
| 44 | 141 677 | D Gear S.S. | 1 |
| 45 | 141 676 | S. Reverse Shaft Spring | 1 |
| 46 | 131 107 | Body Light-proof Moquette Lower | 1 |
| 47 | 131 106 | Body Light-proof Moquette Upper | 1 |
| 48 | 141 675 | F. Gear Release Shaft | 1 |
| 49 | 141 122 | Connector Holder | 1 |
| 50 | 141 687 | RS Lever | 1 |
| 51 | 141 690 | RS Lever Spring | 1 |
| 52 | 141 689 | RS Lever Shaft | 1 |
| 53 | 141 678 | Reverse Lever | 1 |
| 54 | 141 679 | S. Reverse Lever Spring | 1 |
| 55 | 141 699 | Reverse Lever Shaft | 1 |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

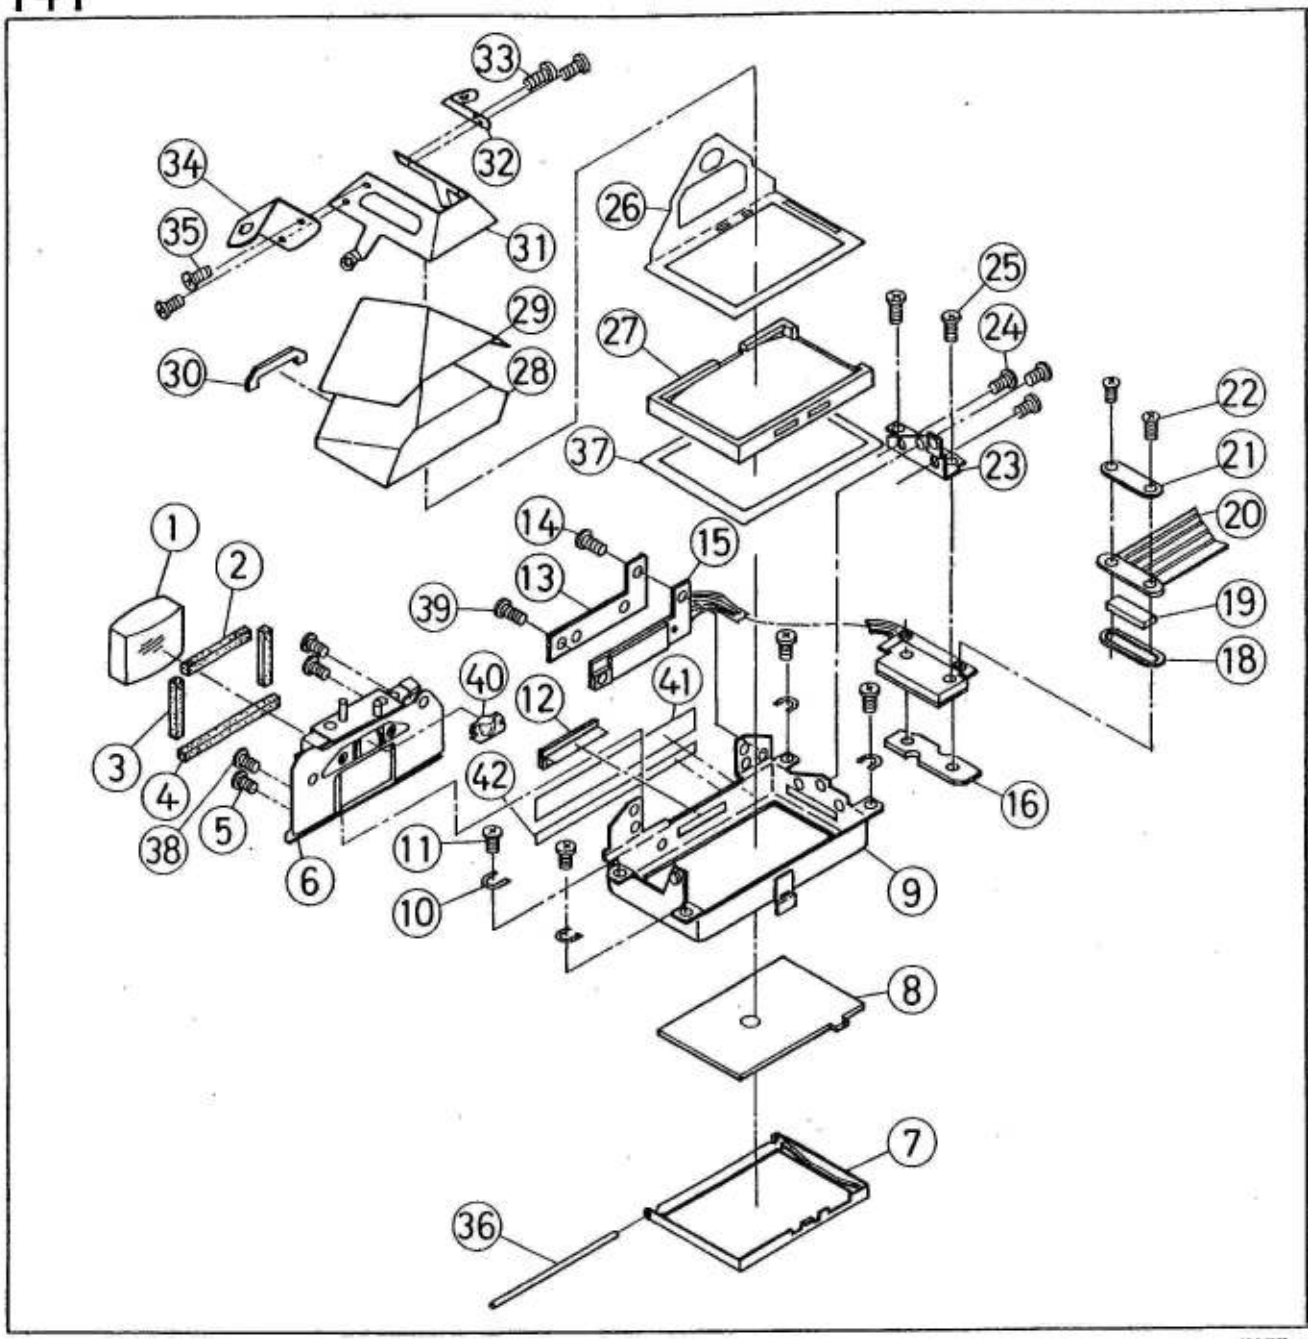


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 141 930 | Eye-piece Lens | 1 |
| 2 | 141 146 | Eye-piece Moquette (1) | 1 |
| 3 | 141 148 | Eye-piece Moquette (3) | 2 |
| 4 | 141 147 | Eye-piece Moqueete (2) | 1 |
| 5 | 63912226 | Eye-shutter S.S. | 3 |
| 6 | 141 901 | Eye-shutter | 1 |
| 7 | 141 083 | Focusing Glass Frame Ass'y | 1 |
| 8 | 141 932 | Focusing Glass (FS-1) | 1 |
| 9 | 071 888 | Penta Prism Holder Ass'y | 1 |
| 10 | 141 884 | P. Adjusting Washer 0.1 | 4 |
| " | 139 872 | " " " 0.2 | 4 |
| " | 139 874 | " " " 0.3 | 4 |
| " | 139 840 | " " " 0.4 Select | 4 |
| " | 139 871 | " " " 0.5 | 4 |
| " | 139 894 | " " " 0.6 | 4 |
| " | 139 898 | " " " 0.7 | 4 |
| " | 128 666 | Limit Lever Washer | 4 |
| 11 | 63912526 | Penta Prism Holder S.S. | 4 |
| 12 | 141 935 | A. Prism | 1 |
| 13 | 141 571 | LED-FPC Fixer | 1 |
| 14 | 61901826 | LED-FPC Fixer S.S. | 1 |
| 15 | 071 506 | Aperture Indicator LED Ass'y | 1 |
| 16 | 141 889 | Time Indicator Fixer | 1 |
| 18 | 141 577 | LED Connector Guide | 1 |
| 19 | 141 540 | Time LED Connector | 1 |
| 20 | ——— | Amplifier Ass'y(See Page#2.6) | 1 |
| 21 | 141 582 | LED Connector Fixer | 1 |
| 22 | 63902526 | LED Connector S.S. | 2 |
| 23 | 071 510 | Time Indicator Base Plate Assy | 1 |
| 24 | 63912026 | Time Indicator Base Plate SS | 3 |
| 25 | 63903526 | Time Indicator Base Plate | 2 |
| 26 | 141 891 | Finder Mask Frame | 1 |
| 27 | 071 933 | Condenser Lens Ass'y | 1 |
| 28 | 141 931 | Penta Prism | 1 |
| 29 | 132 881 | Penta Prism Cap | 1 |
| 30 | 141 886 | Penta Prism Cushion | 1 |
| 31 | 141 885 | Penta Prism Fixer | 1 |
| 32 | 141 902 | ES Guard (Right) | 1 |
| 33 | 61901426 | ES Guard (Right) S.S. | 2 |
| 34 | 141 903 | ES. Guard (Left) | 1 |
| 35 | 61901426 | ES. Guard (Left)S.S. | 2 |
| 36 | 141 896 | PG Hinge Shaft | 1 |
| 37 | 141 912 | Penta Shield Gum | 1 |
| 38 | 63912222 | Eye-shutter S.S. | 1 |
| 39 | 66001055 | LED-FPC Fixer S.S. | 1 |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

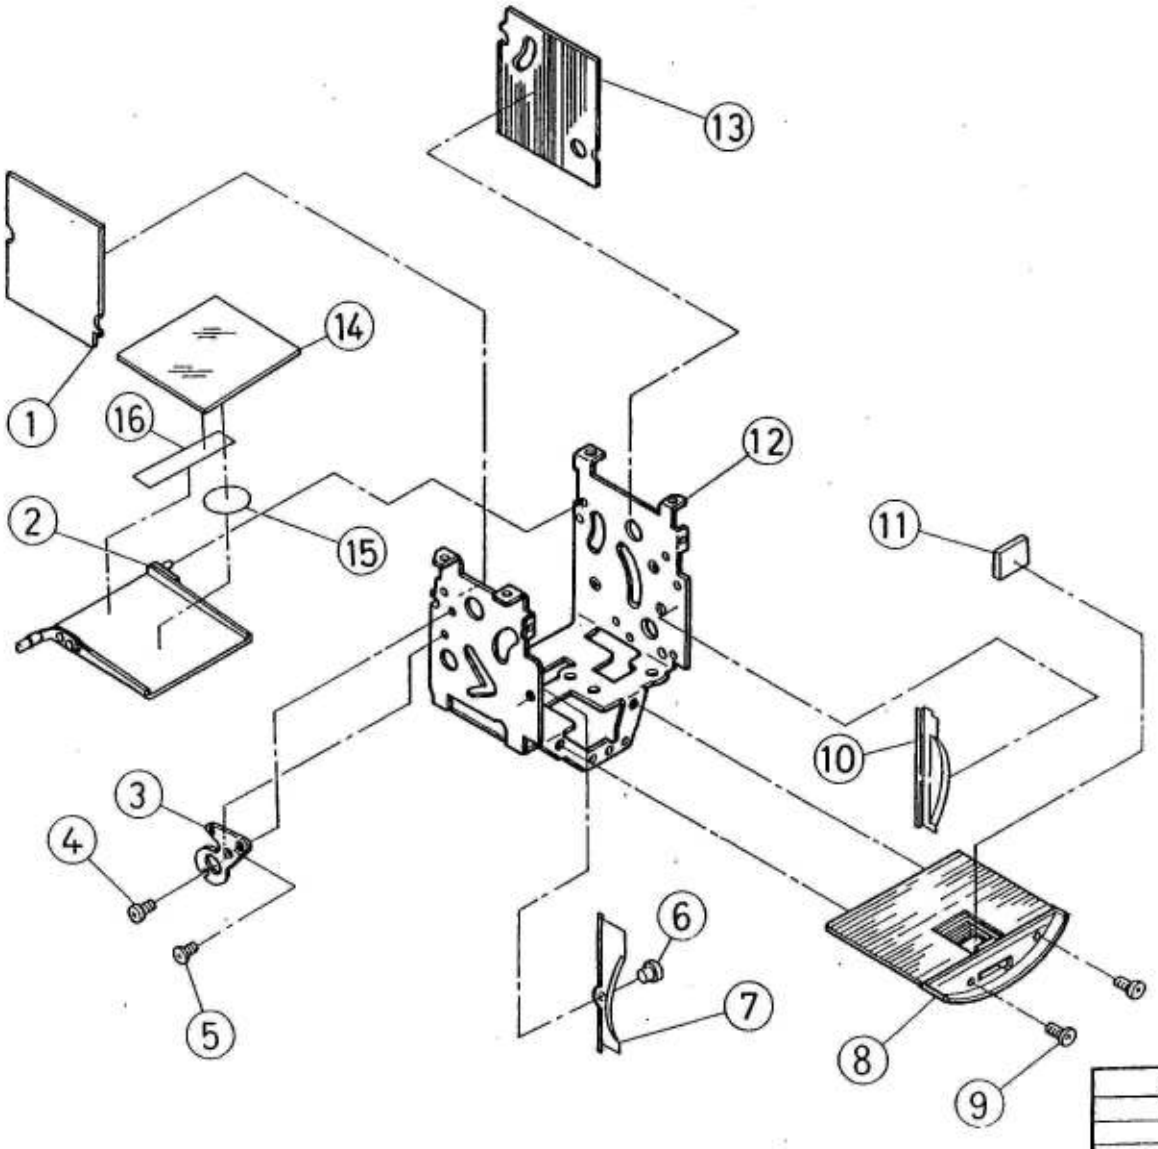


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 141 781 | Mirror Box Light-proof Plate(L | 1 |
| 2 | 071 770 | Mirror Frame Sub Ass'y | 1 |
| 3 | 141 778 | Mirror Hinge | 1 |
| 4 | 61911526 | Mirror Hinge S.S. | 1 |
| 5 | 61811826 | Mirror Hinge S.S. | 1 |
| 6 | 141 785 | Tr. Adjusting Cap | 1 |
| 7 | 141 787 | Mirror Box Dress Plate (Left) | 1 |
| 8 | 141 782 | M. Box Light-proof Plate(Lower | 1 |
| 9 | 61901828 | M.B.Light-proof Plate(Lower)SS | 2 |
| 10 | 141 786 | Mirror Box Dress Plate(Right) | 1 |
| 11 | 139 738 | SPD Mirror | 1 |
| 12 | ★ | Mirror Box | 1 |
| 13 | 141 780 | M. Box Light-proof Plate(Right | 1 |
| 14 | 141 934 | Mirror | 1 |
| 15 | 141 791 | Mirror Tape (1) | 1 |
| 16 | 141 792 | Mirror Tape (2) | 2 |

| FIG. NO. | PARTS NO | DESCRIPTION |
|---|---|---|
| 1 - 16 | 071 701 | Mirror Box Ass'y |
| | | (See Page No. 12, 13) |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

NO. 12

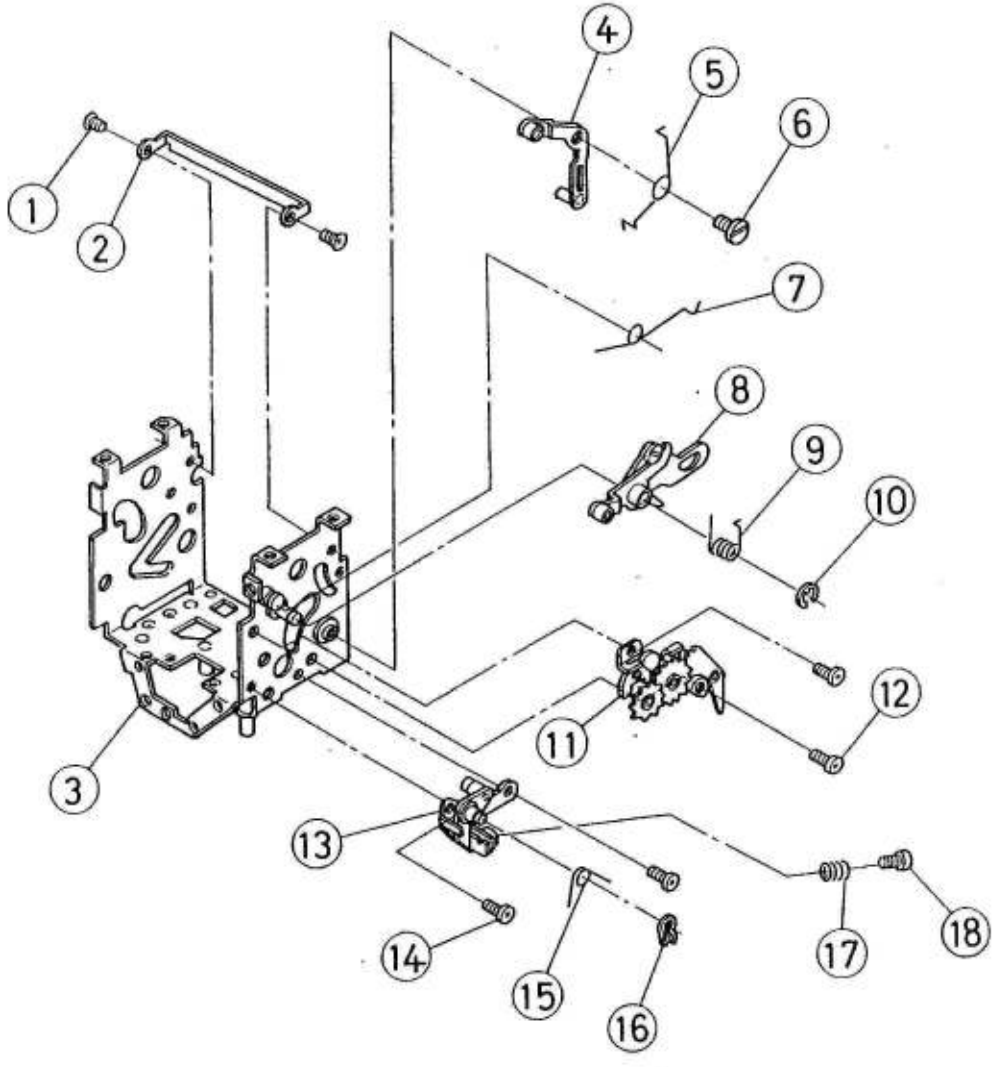


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 61901426 | M.Box Reinforcement Plate SS | 2 |
| 2 | 141 702 | M. Box Reinforcement Plate | 1 |
| 3 | ★ | Mirror Box | 1 |
| 4 | 071 748 | M. Sliding Lever Ass'y | 1 |
| 5 | 141 765 | Governor Restore Spring | 1 |
| 6 | 141 744 | M. Sliding Lever (1) S.S. | 1 |
| 7 | 141 745 | Mirror Restore Spring | 1 |
| 8 | 071 747 | Mirror-up Lever Ass'y | 1 |
| 9 | 141 754 | Mirror-up Spring | 1 |
| 10 | 66101525 | E-15 | 1 |
| 11 | 141 767 | Governor | 1 |
| 12 | 61911526 | Governor S.S. | 2 |
| 13 | 071 757 | 45 Adjusting Base Plate Ass'y | 1 |
| 14 | 61911526 | 45 Adjusting Base P.Ass'y SS | 2 |
| 15 | 141 764 | 45 Lever Spring | 1 |
| 16 | 66152525 | GS Ring 2.5 | 1 |
| 17 | 139 833 | ML Base Plate Spring | 1 |
| 18 | 63915522 | 45 Adjusting S.S. | 1 |

| FIG. NO. | PARTS NO. | DESCRIPTION |
|---|---|---|
| 1 - 18 | 071 701 | Mirror Box Ass'y |
| | | (See Page No. 11, 13) |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

# No.13

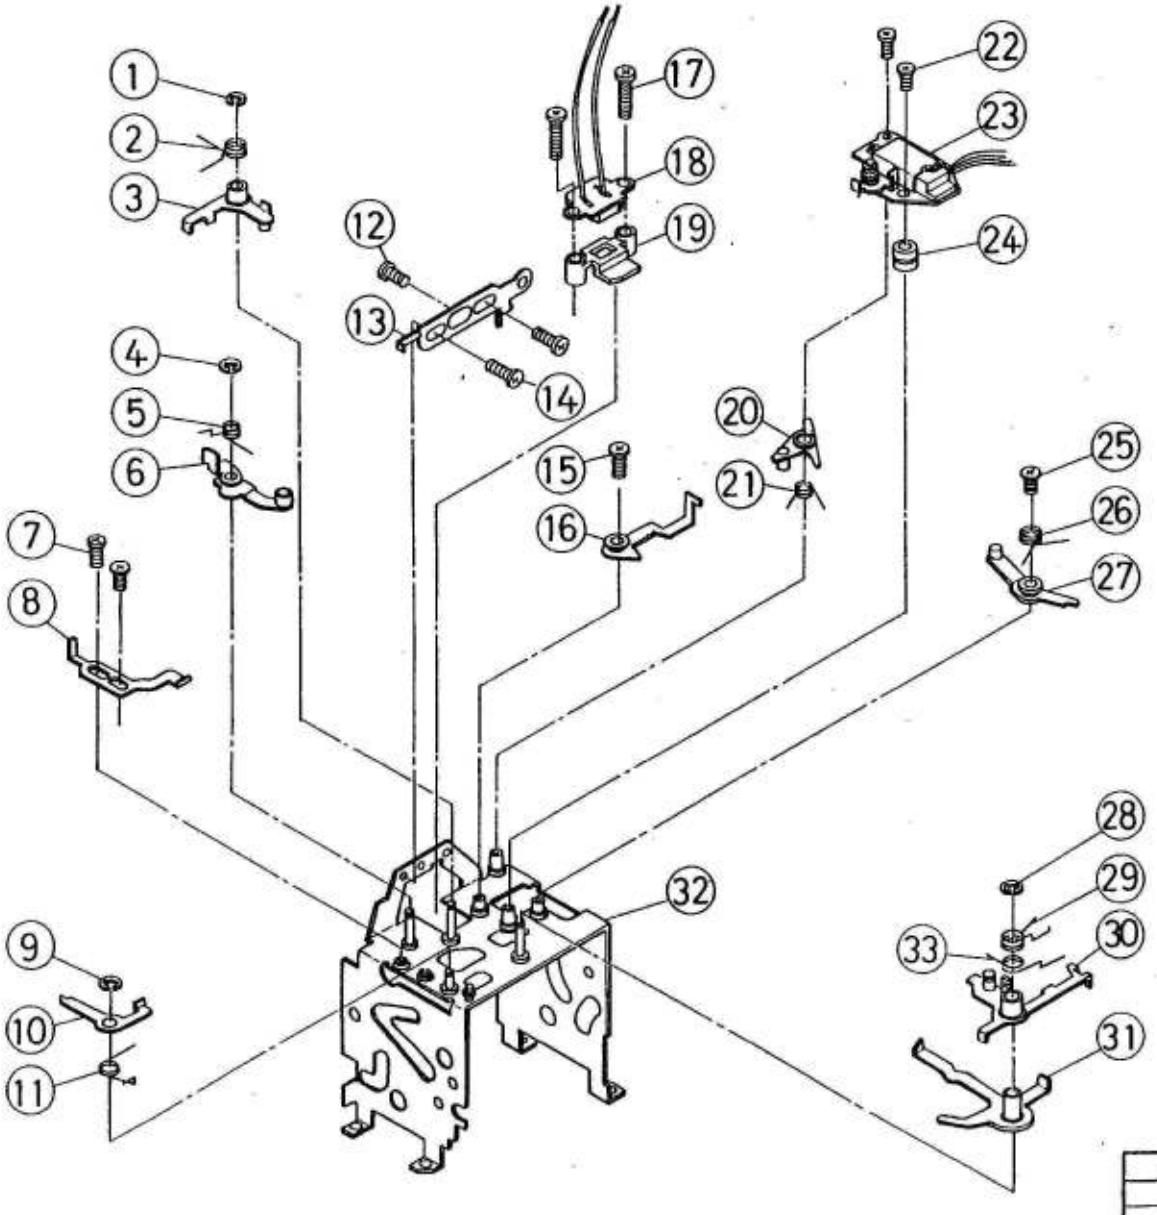


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 66101525 | E-15 | 1 |
| 2 | 141 710 | M. Set Lever Spring | 1 |
| 3 | 071 706 | M. Set Lever Ass'y | 1 |
| 4 | 66101525 | E-15 | 1 |
| 5 | 141 740 | TR Connecting Lever Sp. | 1 |
| 6 | 071 704 | Hand Aperture Lever Ass'y | 1 |
| 7 | 66001050 | TR Connecting Lever S.S. | 2 |
| 8 | 141 738 | TR Connecting Lever | 1 |
| 9 | 66101525 | E-15 | 1 |
| 10 | 071 711 | M. Set Lever Hook Ass'y | 1 |
| 11 | 141 714 | M. Set Lever Hook Spring | 1 |
| 12 | 131 905 | B. Lever (2) S.S. | 3 |
| 13 | 141 768 | B. Lever (2) | 1 |
| 14 | 147 437 | SR Lever (3) Shaft | 2 |
| 15 | 66001050 | RL (2) Ass'y S.S. | 1 |
| 16 | 071 730 | RL (2) Ass'y | 1 |
| 17 | 66001059 | SPD Holder S.S. | 2 |
| 18 | 071 536 | SPD Ass'y | 1 |
| 19 | 141 766 | SPD Holder | 1 |
| 20 | 071 727 | RL (1) Ass'y | 1 |
| 21 | 141 733 | RL (1) Spring | 1 |
| 22 | 63912522 | R-Magnet S.S. | 2 |
| 23 | 141 784 | R-Magnet Ass'y | 1 |
| 24 | 141 724 | Auto Lever Stopper | 1 |
| 25 | 66001050 | RL (3) Ass'y S.S. | 1 |
| 26 | 141 736 | RL (3) Spring | 1 |
| 27 | 071 734 | RL (3) Ass'y | 1 |
| 28 | 66101525 | E-15 | 1 |
| 29 | 141 721 | Mirror Driving Spring | 1 |
| 30 | 071 719 | M. Driving Lever Ass'y | 1 |
| 31 | 071 715 | Auto Lever Ass'y | 1 |
| 32 | ★ | Mirror Box | 1 |
| 33 | 141 718 | Auto Aperture Spring | 1 |

| FIG. NO. | PARTS NO. | DESCRIPTION |
|---|---|---|
| 1 - 33 | 071 701 | Mirror Box Ass'y |
| | | (See Page No. 11, 12) |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

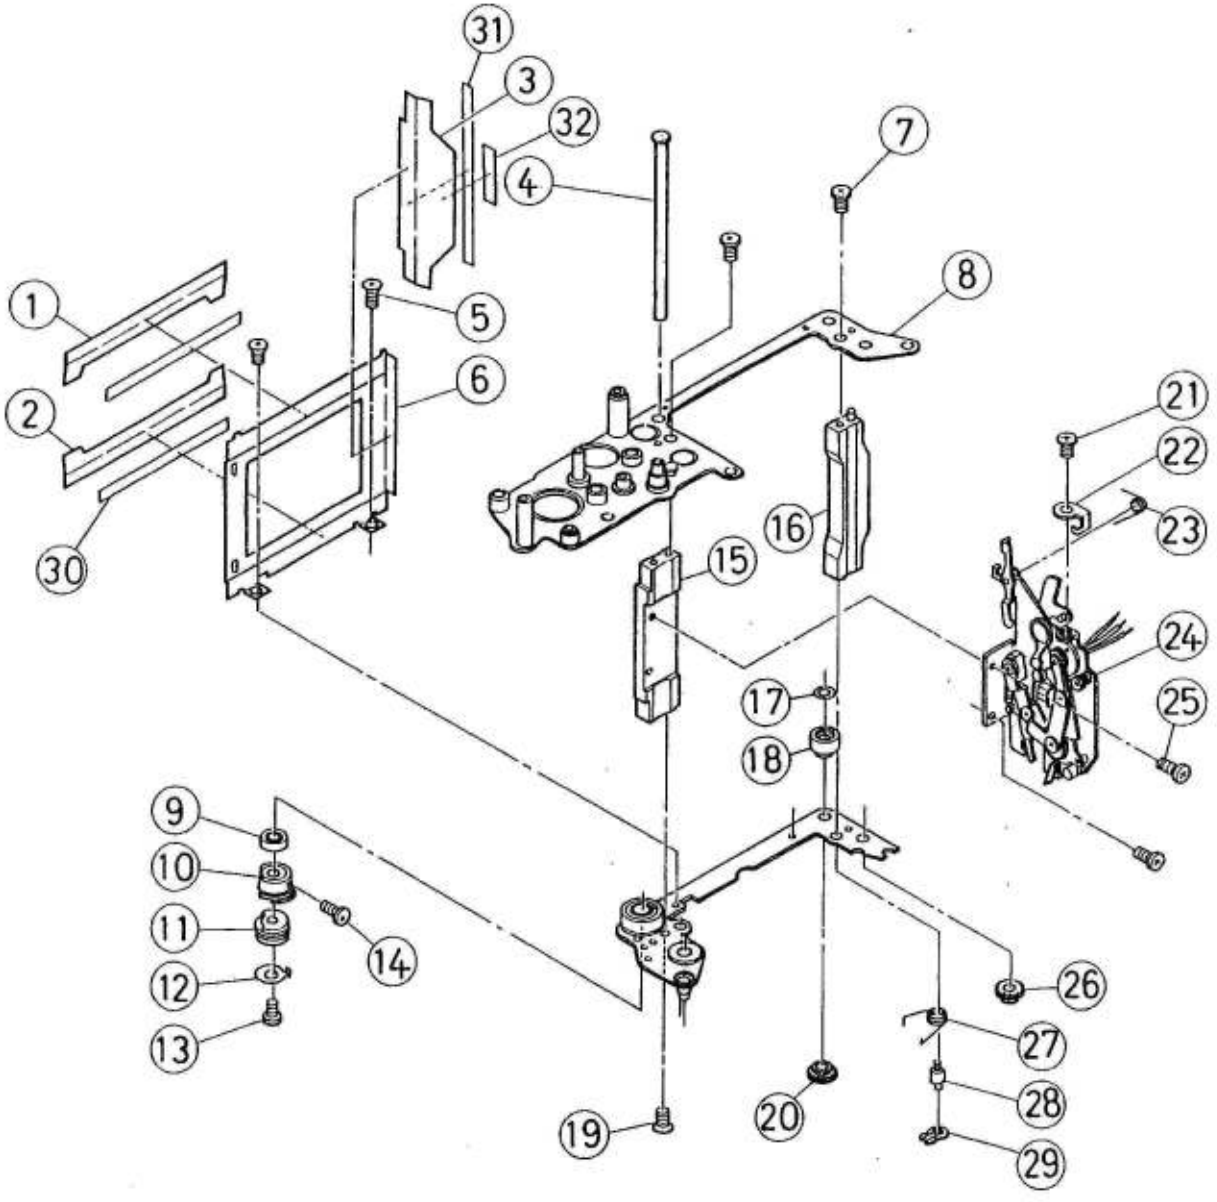


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 131 695 | Mirror Box Light-Proof Plate(1) | 1 |
| 2 | 131 695 | " " " " | 1 |
| 3 | 141 396 | Curtain Light-Proof Plate(2) | 1 |
| 4 | 141 397 | Interlock Shaft | 1 |
| 5 | 61801826 | Curtain Light-Proof Plate SS | 2 |
| 6 | 141 385 | Curtain Light-proof Plate | 1 |
| 7 | 61813022 | Upper Base Plate S.S. | 2 |
| 8 | 071 301 | Upper Base Plate Ass'y | 1 |
| 9 | 141 355 | Shutter Bearing | 1 |
| 10 | 141 390 | Second Curtain Hook Plate | 1 |
| 11 | 141 391 | Rotary Limit Guide | 1 |
| 12 | 141 394 | Second Curtain Stopper | 1 |
| 13 | 66001054 | Second Curtain Stopper S.S. | 1 |
| 14 | 66002002 | Second Curtain Hook Plate S.S. | 1 |
| 15 | 141 370 | Base Plate Post (Left) | 1 |
| 16 | 141 371 | Base Plate Post (Right) | 1 |
| 17 | 60132110 | Second Curtain Sp Shaft Washer | 1 |
| 18 | 141 372 | First Curtain Roller | 1 |
| 19 | 61813022 | Lower Base Plate S.S. | 1 |
| 20 | 137 488 | Ratchet Wheel | 1 |
| 21 | 63912022 | TR Mechan. S.S. | 1 |
| 22 | 141 448 | S-Mg Cord Fixer | 1 |
| 23 | 141 449 | Winding Stopper Set Hook Sp. | 1 |
| 24 | 141 401 | TR Mechan. | 1 |
| 25 | 63912522 | TR Mechan. S.S. | 2 |
| 26 | 137 488 | Ratchet Wheel | 1 |
| 27 | 141 384 | Ratchet Wheel Spring | 1 |
| 28 | 137 489 | Ratchet Wheel Spring Shaft | 1 |
| 29 | 66172022 | GS Ring | 1 |
| 30 | 131 697 | Adhesive Tape 1 | 2 |
| 31 | 131 697 | Adhesive Tape 1 | 1 |
| 32 | 141 911 | Lens Adhesive Tape | 1 |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

# No.15

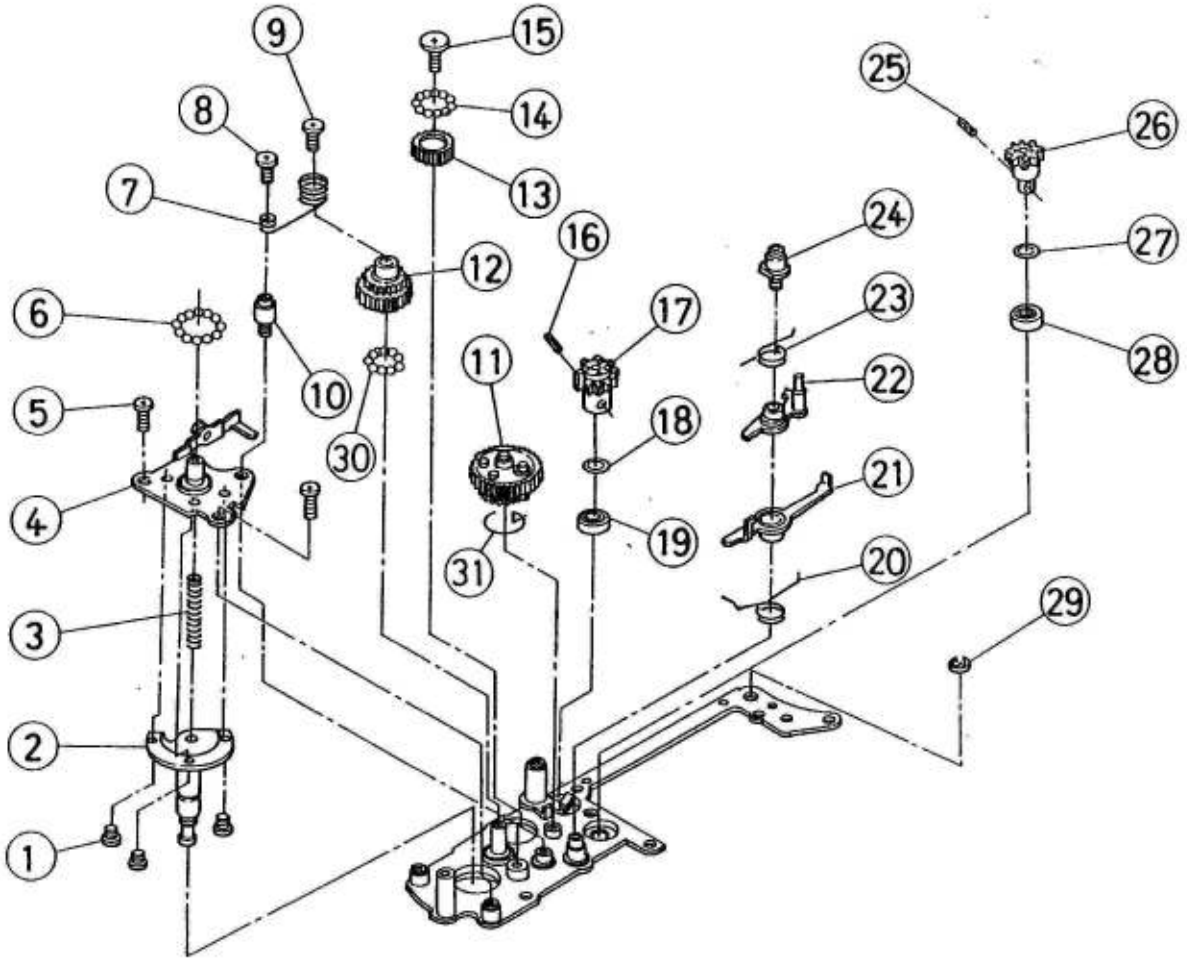


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 61911522 | F Gear Shaft S.S. | 3 |
| 2 | 071 341 | F Gear Shaft Ass'y | 1 |
| 3 | 141 343 | B. Minus Contactor Spring | 1 |
| 4 | 071 310 | A. Gear Base Plate Ass'y | 1 |
| 5 | 63912522 | A. Gear Base Plate S.S. | 2 |
| 6 | 66701020 | Steel Ball | 14 |
| 7 | 141 351 | C. Gear Kick Spring | 1 |
| 8 | 66001031 | Kick Spring Shaft S.S. | 1 |
| 9 | 63912522 | C Gear S.S. | 1 |
| 10 | 141 350 | Kick Spring Shaft | 1 |
| 11 | 071 325 | Sector Gear Ass'y | 1 |
| 12 | 071 318 | C Gear Ass'y | 1 |
| 13 | 141 320 | Idle Gear | 1 |
| 14 | 66701020 | Steel Ball | 13 |
| 15 | 66001053 | Idle Gear Shaft S.S. | 1 |
| 16 | 66662230 | Spring Pin | 1 |
| 17 | 141 399 | Second Curtain Gear | 1 |
| 18 | 60112110 | Second Curtain Gear Washer | |
| 19 | 141 355 | Shutter Bearing | 1 |
| 20 | 141 337 | Stopper Claw Set Lever Sp. | 1 |
| 21 | 071 335 | Stopper Claw Set Lever Ass'y | 1 |
| 22 | 071 331 | Stopper Claw Ass'y | 1 |
| 23 | 141 334 | Stopper Claw Spring | 1 |
| 24 | 141 338 | Stopper Claw S.S. | 1 |
| 25 | 66662230 | Spring Pin | 1 |
| 26 | 141 398 | First Curtain Gear | 1 |
| 27 | 60112110 | First Curtain Gear Washer | 1 |
| 28 | 141 355 | Shutter Bearing | 1 |
| 29 | 66101525 | E Ring | 1 |
| 30 | 66701520 | Steel Ball | 8 |
| 31 | 141 698 | Anti-rewind Spring | 1 |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

NO.10

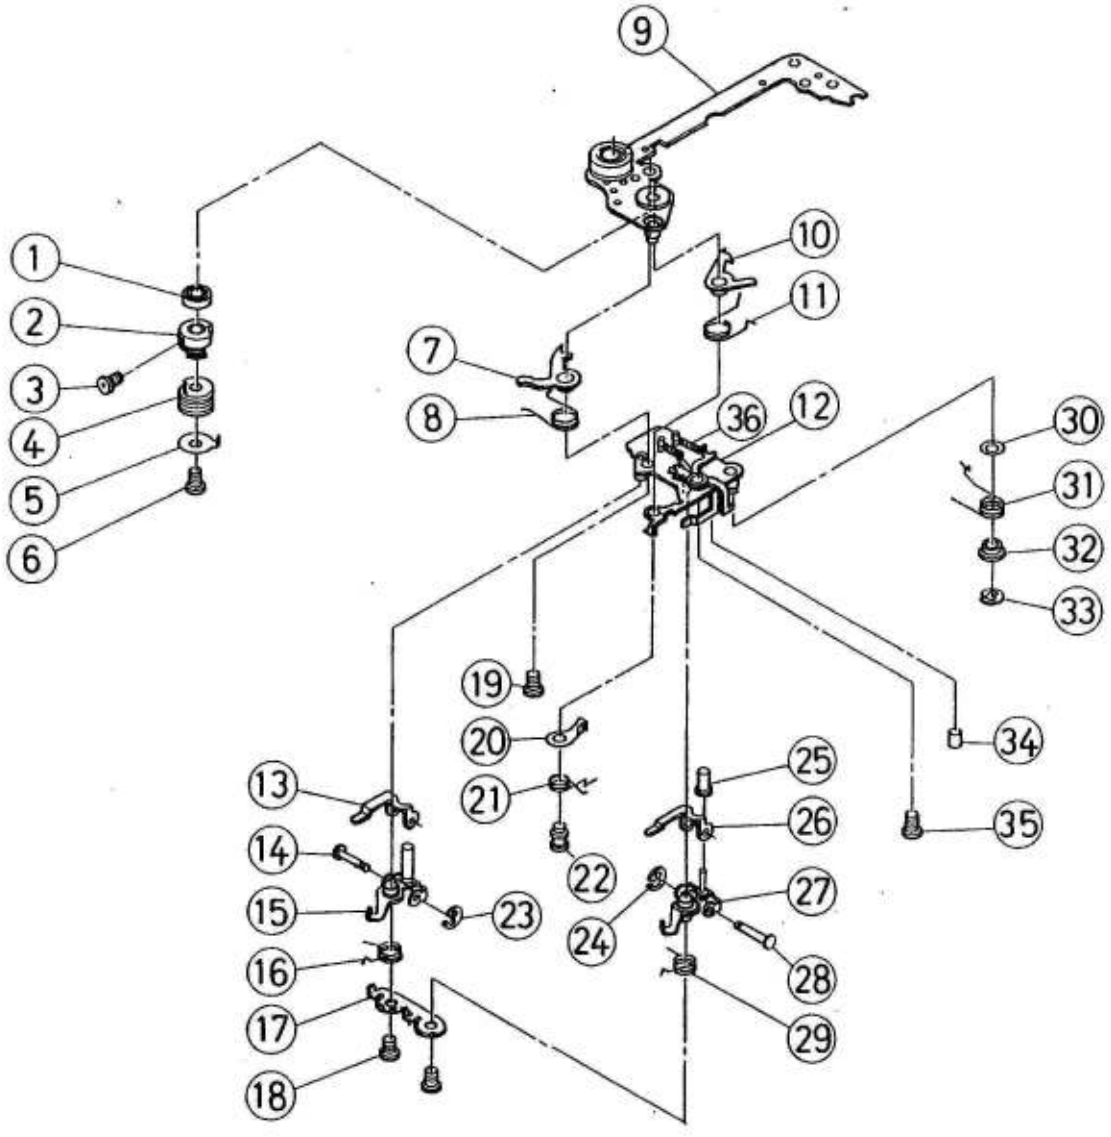


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 141 355 | Shutter Bearing | 1 |
| 2 | 141 389 | First Curtain Hook Plate | 1 |
| 3 | 66002002 | First Curtain Hook Plate S.S. | 1 |
| 4 | 141 391 | Rotary Limit Guide | 1 |
| 5 | 141 392 | First Curtain Stopper | 1 |
| 6 | 66001054 | First Curtain Stopper S.S. | 1 |
| 7 | 141 381 | Second Curtain Hook Lever | 1 |
| 8 | 141 382 | Second Curtain Hook Lever Sp. | 1 |
| 9 | 071 376 | Lower Base Plate Ass'y | 1 |
| 10 | 141 379 | First Curtain Hook Lever | 1 |
| 11 | 141 380 | First Curtain Hook Lever Sp. | 1 |
| 12 | 071 461 | Brake Base Plate Ass'y | 1 |
| 13 | 141 480 | Rotary Limit Lever | 1 |
| 14 | 141 481 | Rotary Limit Lever Shaft | 1 |
| 15 | 071 479 | Brake Lever Ass'y (S) | 1 |
| 16 | 141 487 | Brake Spring | 1 |
| 17 | 141 483 | Brake Spring Fixer | 1 |
| 18 | 66001050 | Brake Spring Fixer S.S. | 2 |
| 19 | 63912522 | Brake Base Plate S.S. | 1 |
| 20 | 141 484 | First Curtain Release Lever | 1 |
| 21 | 141 486 | First Curtain Release Lever Sp | 1 |
| 22 | 141 485 | First Curtain Release L. Shaft | 1 |
| 23 | 66101225 | E Ring | 1 |
| 24 | 66101225 | E Ring | 1 |
| 25 | 141 478 | X. Contact Collar | 1 |
| 26 | 141 480 | Rotary Limit Lever | 1 |
| 27 | 071 474 | Brake Lever Ass'y(F) | 1 |
| 28 | 141 481 | Rotary Limit Lever Shaft | 1 |
| 29 | 141 482 | Brake Spring | 1 |
| 30 | 131 396 | First Curtain Sp. Drum Washer | 1 |
| 31 | 141 467 | X. Contact | 1 |
| 32 | 141 465 | X. Contact Base | 1 |
| 33 | 66101525 | X. Contact Shaft | 1 |
| 34 | 66931203 | Brake Base Plate Tube | 1 |
| 35 | 63904026 | TR. Mechan. S.S. | 1 |
| 36 | 141 472 | Mechan. Hook Lever Spring | 1 |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

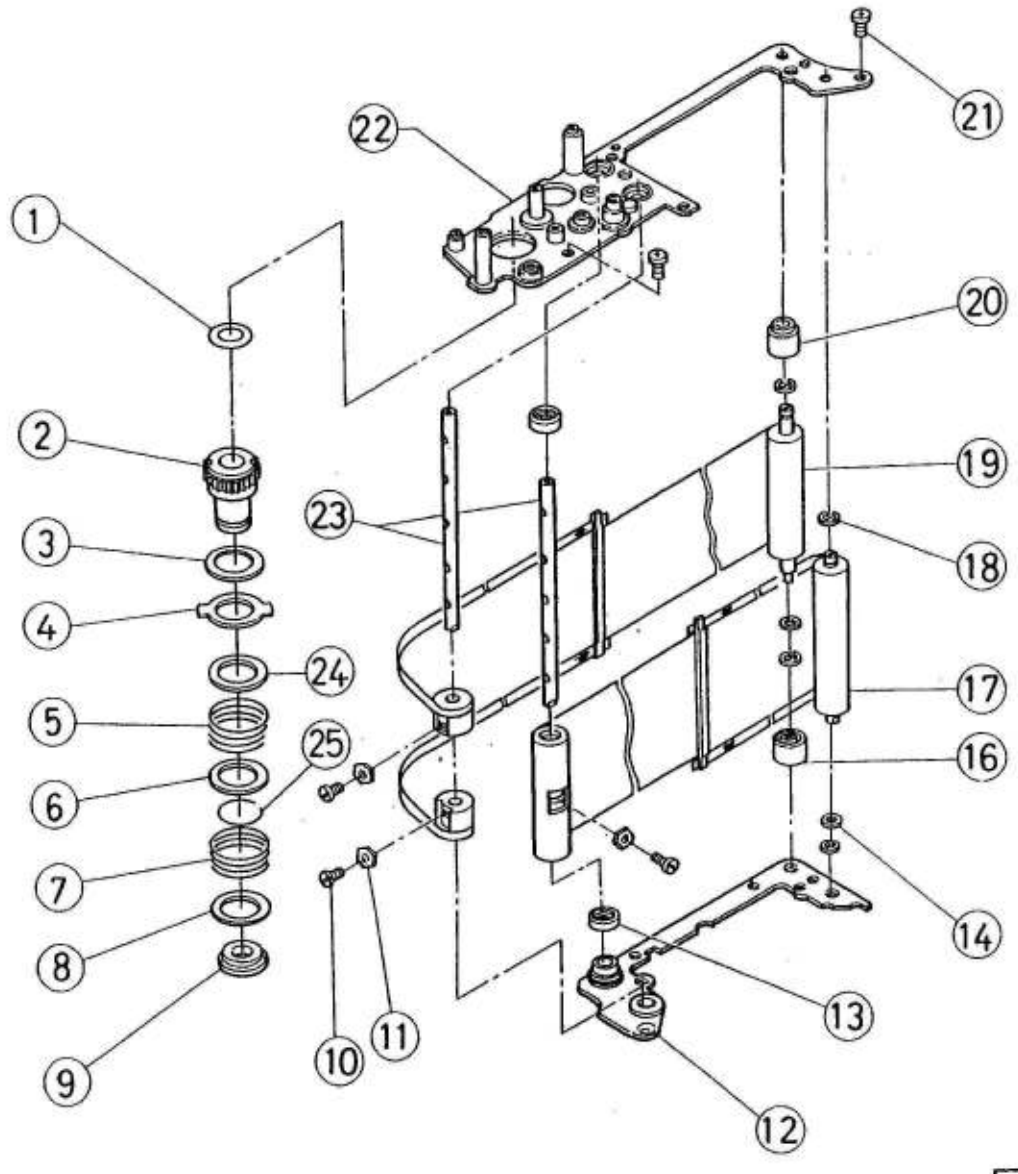


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 141 352 | F. Gear Washer | 1 |
| 2 | 141 344 | F. Gear | 1 |
| 3 | 141 346 | Spool Friction Plate | 1 |
| 4 | 141 353 | Friction Plate | 1 |
| 5 | 141 347 | Friction Spring | 1 |
| 6 | 141 346 | Spool Friction Plate | 1 |
| 7 | 141 348 | F. Gear Spring | 1 |
| 8 | 141 354 | F. Gear Spring Washer | 1 |
| 9 | 141 349 | F. Gear Spring Washer | 1 |
| 10 | 141 360 | Curtain Adjusting Plate S.S. | 3 |
| 11 | 141 359 | Curtain Adjusting Plate | 3 |
| 12 | 071 376 | Lower Base Plate Ass'y | 1 |
| 13 | 071 372 | First Curtain Roller | 2 |
| 14 | 131 396 | First Curtain Drum Washer | 2 |
| 16 | 141 373 | Second Curtain Roller | 1 |
| 17 | 071 358 | Second Curtain Ass'y | 1 |
| 18 | 66101525 | E Ring | 1 |
| 19 | 071 357 | First Curtain Ass'y | 1 |
| 20 | 141 373 | First Curtain Roller | 1 |
| 21 | 61912524 | Shutter S.S. | 2 |
| 22 | 071 301 | Upper Base Plate Ass'y | 1 |
| 23 | 141 356 | Shutter Shaft | 2 |
| 24 | 141 346 | Spool Friction Plate | 1 |
| 25 | 132 649 | Spring Cover Stopper | 1 |

| FIG. NO. | PARTS NO. | DESCRIPTION |
|---|---|---|
| 2 -9, 24, 25. | 071 344 | Friction Gear Ass'y |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

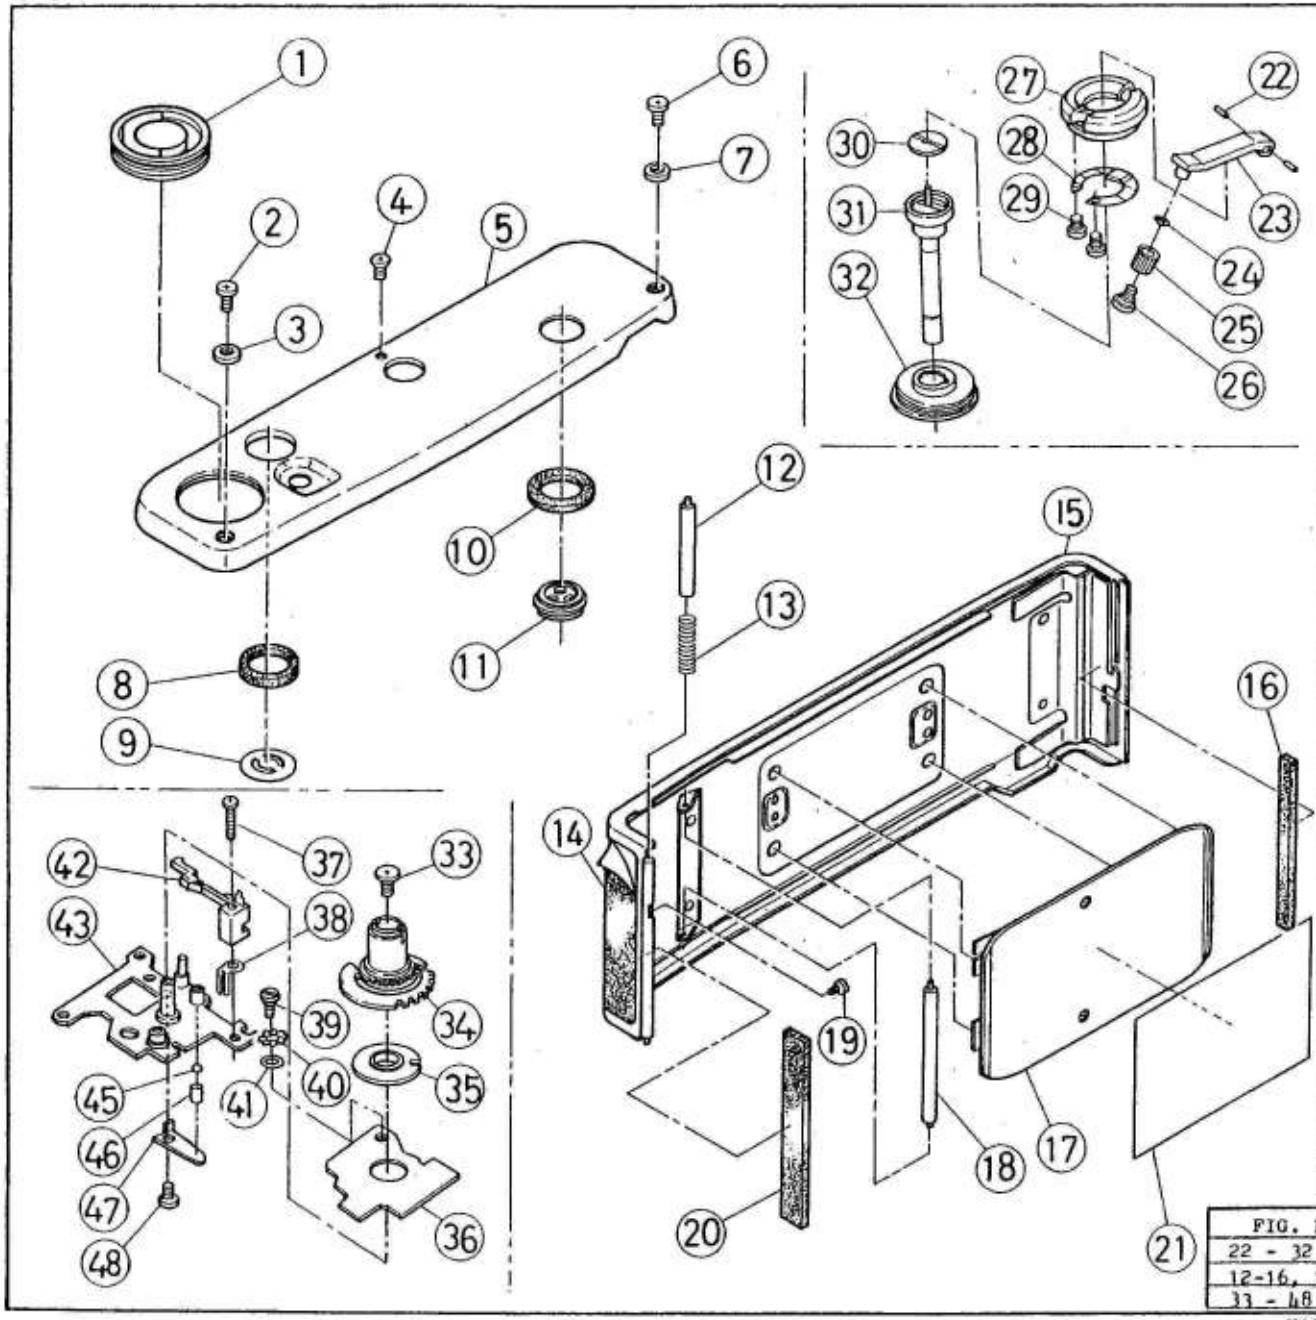


| | PARTS NO. | DESCRIPTION | Q'TY |
|---|---|---|---|
| 1 | 071 195 | Battery Cap Ass'y | 1 |
| 2 | 131 199 | Bottom Cover S.S. | 1 |
| 3 | 131 198 | Bottom Cover Collar | 1 |
| 4 | 141 194 | Bottom Cover S.S. | 1 |
| 5 | 141 190 | Bottom Cover | 1 |
| 6 | 131 199 | Bottom Cover S.S. | 1 |
| 7 | 131 198 | Bottom Cover Collar | 1 |
| 8 | 131 194 | MD Light-proof Moquette | 1 |
| 9 | 141 697 | MD Coupler Plate | 1 |
| 10 | 132 654 | Terminal Packing | 1 |
| 11 | 142 451 | Terminal Insulator | 1 |
| 12 | 131 130 | Hinge Shaft (1) | 1 |
| 13 | 131 133 | Hinge Shaft Spring | 1 |
| 14 | 141 152 | Back Cover Leather | 1 |
| 15 | 071 152 | Back Cover Ass'y | 1 |
| 16 | 131 126 | Back Cover Moquette (2) | 1 |
| 17 | 071 151 | Pressure Plate Ass'y | 1 |
| 18 | 131 136 | Film Roller | 1 |
| 19 | 131 132 | Hinge Shaft Stopper | 1 |
| 20 | 131 125 | Back Cover Moquette (1) | 1 |
| 21 | 141 158 | Pressure Plate Seat | 1 |
| 22 | 141 255 | Crank Arm Shaft | 2 |
| 23 | 141 254 | Crank Arm | 1 |
| 24 | 60151810 | Crank Arm Washer | 1 |
| 25 | 131 672 | Crank Knob | 1 |
| 26 | 131 671 | Crank Knob S.S. | 1 |
| 27 | 141 251 | Rewind Knob (1) | 1 |
| 28 | 141257-8 | Rewind Click Spring | 1 |
| 29 | 61902022 | Rewind Click Spring S.S. | 2 |
| 30 | 141 252 | Rewind Knob Name Plate | 1 |
| 31 | 131659-A | Rewind Shaft Ass'y | 1 |
| 32 | 141 256 | Rewind Knob (2) | 1 |
| 33 | 66001067 | ASA Dial Shaft S.S. | 1 |
| 34 | 071 216 | Corrective Click Plate Ass'y | 1 |
| 35 | 071 210 | ASA Contactor Ass'y | 1 |
| 36 | 141 517 | ASA Resister Base | 1 |
| 37 | 63918022 | Main Switch S.S. | 1 |
| 38 | 141 225 | FPC Holder | 1 |
| 39 | 141 224 | ASA Base S.S. | 1 |
| 40 | 141 388 | Spring Washer | 1 |
| 41 | 60132110 | Washer | 1 |
| 42 | 141 222 | Main Switch | 1 |
| 43 | 071 201 | ASA Base Plate Ass'y | 1 |
| 45 | 66701520 | Corrective Click Ball | 1 |
| 46 | 141 205 | Click Ball Shaft | 1 |
| 47 | 141 204 | Corrective Click Spring | 1 |
| 48 | 66001041 | Corrective Click Sp. S.S. | 1 |

| FIG. NO. | PARTS NO. | DESCRIPTION |
|---|---|---|
| 22 - 32 | 071 251 | Rewind Knob Assy(See Page#1) |
| 12-16, 18-20 | 071 152 | Back Cover Ass'y |
| 33 - 48 | ★ | ASA Resistor Ass'y(See Page#b) |

NOTE : (Parts with marked "★" are not available)

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.